

No.	VOLTAGE 电压	AMPERAGE 电流	ROTATION 转向	PULLEY 皮带轮	DESIGN 结构	TYPE 产品名称	FAMILY 产品系列	OE MFR 原厂制造商	OE P/N 原厂号	OE P/N 原厂号	CROSS RERENRECE 其它参考号	LESTER P/N	QIMING P/N 启明型号
1	12V	120A			IR/IF	ALTERNATOR		BOSCH	124-515-073			11041	A11041BO
2	12V	150A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-615-014			11042	A11042BO
3	12V	140A	CW	SD5	IR/IF	ALTERNATOR		BOSCH	0-124-525-017			11043	A11043BO
4	12V	105A			IR/IF	ALTERNATOR		BOSCH	0-124-415-035			11045	A11045BO
5	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-009	CA1769IR		11064	A11064BO
6	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-007	CA1813IR		11065	A11065BO
7	12V	180A			IR/IF	ALTERNATOR		BOSCH	0-124-625-007			11068	A11068BO
8	12V	150A			IR/LC	ALTERNATOR		BOSCH	0-122-0AA-1H0	CA1632IR		11074	A11074BO
9	12V	105A			IR/IF	ALTERNATOR		BOSCH	0-124-325-133, 0-124-325-152			11076	A11076BO
10	12V	155A			IR/IF	ALTERNATOR		BOSCH	0-124-525-083	CA2009IR		11077	A11077BO
11	12V	160A			IR/IF	ALTERNATOR		BOSCH	0-124-625-003	CA1861IR		11081	A11081BO
12	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-026	CA1825IR		11083	A11083BO
13	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-325-000, 0-124-525-531			11091	A11091BO
14	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-053, 0-124-515-121	CA1656IR		11124	A11124BO
15	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-425-030			11125	A11125BO
16	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-004, 0-124-425-088			11127	A11127BO
17	12V	150A			IR/IF	ALTERNATOR		BOSCH	0124525057			11130	A11130BO
18	12V	140A			IR/IF	ALTERNATOR		BOSCH	016903016AX, 0124525088	CA1746IR		11133	A11133BO
19	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-039	CA1782IR		11134	A11134BO
20	12V	120A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-425-032			11185	A11185BO
21	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-018	CA1540IR		11209	A11209BO
22	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-083	CA1541IR		11210	A11210BO
23	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-054	CA1908IR		11215	A11215BO
24	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-62-5014	CA1859IR		11216	A11216BO
25	12V	180A			IR/IF	ALTERNATOR		BOSCH	0-124-625-023			11217	A11217BO
26	12V	180A			IR/IF	ALTERNATOR		BOSCH	0-121-715-005, 0-086-081-230	CA1912IR		11221	A11221BO
27	12V	132A	CW	S7	ER/IF	ALTERNATOR		BOSCH	0-124-325-133, 0-124-525-111			11233	A11233BO
28	12V	125A			IR/IF	ALTERNATOR		BOSCH	0-124-425-105			11234	A11234BO
29	12V	132A	CW	SC8	ER/IF	ALTERNATOR		BOSCH	0-124-325-103, 0-124-525-154			11235	A11235BO
30	12V	136A			ER/IF	ALTERNATOR		BOSCH	0-124-525-156			11239	A11239BO
31	12V	140A	CW	SC5	IR/IF	ALTERNATOR		BOSCH	0-124-525-102			11254	A11254BO
32	12V	140A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-525-086			11255	A11255BO
33	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-056	CA1740IR		11279	A11279BO
34	12V	132A	CW	S6	ER/IF	ALTERNATOR		BOSCH	0-124-525-110			11280	A11280BO
35	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-325-137, 0-124-325-158	CA1868IR		11333	A11333BO
36	12V	150A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-121-015-027, 0-121-615-127	CA2006IR	443043	11336	A11336BO
37	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-017	CA1763IR		11360	A11360BO
38	12V	180A			IR/IF	ALTERNATOR		BOSCH	0-124-025-010, 0-124-625-028	625010		11388	A11388BO
39	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-143	CA1961IR		11454	A11454BO
40	12V	140A	CCW	SC5	IR/IF	ALTERNATOR		BOSCH	0-124-325-103, 0-124-525-085			11460	A11460BO
41	12V	140A			IR	ALTERNATOR		BOSCH	0-124-525-113	CA2007IR		11466	A11466BO

42	12V	120A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-425-050			11475	A11475BO
43	12V	160A			IR/IF	ALTERNATOR		BOSCH	0-124-625-024	CA2028IR		11488	A11488BO
44	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-060	CA1973IR		11501	A11501BO
45	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-030	615030		11561	A11561BO
46	12V	120A				ALTERNATOR		BOSCH	0-124-515-113			11562	A11562BO
47	12V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-315-033	JA1796IR BO		11689	A11689BO
48	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-187	CA2011IR		11721	A11721BO
49	12V	33A			IR/EF	ALTERNATOR		BOSCH	0-120-339-515	CA77IR		12029	A12029BO
50	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-409-349, 0-120-460-624, 0-120-484-018	CA1336IR		12135	A12135BO
51	12V	95A	CW		IR/EF	ALTERNATOR		BOSCH	120-484-018	CA1198IR		12145	A12145BO
52	24V	45A			IR/EF	ALTERNATOR		BOSCH	0-120-488-200, 0-120-488-204	BXU2422		12148	A12148BO
53	12V	85A			IR/EF	ALTERNATOR		BOSCH	0-120-484-002, 0-120-484-002, 0-120-484-010	CA847IR		12151	A12151BO
54	12V	65A	CW		IR/EF	ALTERNATOR		BOSCH	9-120-060-041	1-2501-31BO		12159	A12159BO
55	12V	65A			IR/EF	ALTERNATOR		BOSCH	CA1197IR	CA1197IR		12161	A12161BO
56	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-409-309, 0-120-484-011, 0-120-484-010	CA227IR		12167	A12167BO
57	12V	120A			IR/EF	ALTERNATOR		BOSCH	0-120-484-011, 0-120-484-010	CA1068IR		12168	A12168BO
58	12V	95A	CW	V2	IR	ALTERNATOR		BOSCH	0-120-484-001			12169	A12169BO
59	24V	27A			IR/EF	ALTERNATOR		BOSCH	0-120-489-730	CA341IR		12217	A12217BO
60	12V	37A			IR/EF	ALTERNATOR		BOSCH	0-120-488-297, 9-120-060-027	CA1082IR		12223	A12223BO
61	12V	65A			IR/EF	ALTERNATOR		BOSCH	0-120-488-296	488296		12224	A1224BO
62	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-469-523	CA500IR		12293	A12293BO
63	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-469-585	CA501IR		12294	A12294BO
64	24V	45A			IR/EF	ALTERNATOR		BOSCH	9-120-080-144	AL144		12295	A12295BO
65	12V	120A			IR/IF	ALTERNATOR		BOSCH	F-005-A00-020			12334	A12334BO
66	12V	115A			IR/IF	ALTERNATOR		BOSCH	0-123-512-500	BXH1231A		12370	A12370BO
67	12V	35A			IR/EF	ALTERNATOR		BOSCH	0-120-484-027	484027		12373	A12373BO
68	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-315-501	CA1062IR		12379	A12379BO
69	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-986-047-210	CA1831IR		12381	A12381BO
70	12V	115A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-123-310-082, 0-123-510-107, 0-123-510-107, 0-123-510-107	CA1481IR		12383	A12383BO
71	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-019	CA1630IR		12384	A12384BO
72	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-020	115318		12385	A12385BO
73	24V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-409-113, 0-120-460-117, 0-120-460-117	CA1593IR		12386	A12386BO
74	24V	80A			IR/IF	ALTERNATOR		BOSCH	0 124 555 001	CA1666IR		12387	A12387BO
75	24V	100A			IR/EF	ALTERNATOR		BOSCH	0-120-488-143, 0-120-469-145, 0-120-469-145, 0-120-469-145	CA1505IR		12388	A12388BO
76	24V	100A			IR/IF	ALTERNATOR		BOSCH	0-124-655-004, 0-124-655-004, 0-124-655-004, 0-124-655-004	CA1739IR		12389	A12389BO
77	24V	45A			IR/EF	ALTERNATOR		BOSCH	9-120-080-114	AL114		12443	A12443BO
78	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-124-315-030			12445	A12445BO
79	12V	150A	CCW	S8	IR/IF	ALTERNATOR		BOSCH	0-123-515-502			12492	A12492BO
80	24V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-488-037, 0-120-469-114	CA853IR		12571	A12571BO
81	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-469-032			12572	A12572BO
82	24V	120A			IR/EF	ALTERNATOR		BOSCH	0-120-689-538	112302		12577	A12577BO
83	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-120			12579	A12579BO
84	24V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-468-053	CA1035IR		12585	A12585BO
85	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-409-103, 0-120-460-500, 0-120-460-500	CA333IR		12586	A12586BO
86	12V	140A	CW	S7	IR/IF	ALTERNATOR		BOSCH	0-124-525-020	CA1837IR	443156	12588	A12588BO

87	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-005, 0-124-615-041, 0467560200, 0	CA1694IR		12589	A12589BO
88	24V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-555-005, 0467560200, 0	CA1553IR		12590	A12590BO
89	24V	70A			IR/IF	ALTERNATOR		BOSCH	0-124-555-005	CA1699IR		12591	A12591BO
90	24V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-655-005	CA1812IR		12594	A12594BO
91	24V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-468-093	CA907IR		12596	A12596BO
92	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-009	CA1853IR		12599	A12599BO
93	24V	140A			IR/EF	ALTERNATOR		BOSCH	0-120-689-535	CA1236IR		12610	A12610BO
94	24V	120A	BI		IR/EF	ALTERNATOR	T1	BOSCH	0-120-689-511	CA1224IR		12611	A12611BO
95	12V	90A			IR/EF	ALTERNATOR		BOSCH	0-120-484-049	484049		12614	A12614BO
96	24V	140A			IR/EF	ALTERNATOR		BOSCH	0-120-689-541	CA1237IR		12615	A12615BO
97	24V	140A			IR/EF	ALTERNATOR		BOSCH	0-120-689-548	CA1667IR		12616	A12616BO
98	24V	140A	BI		IR/EF	ALTERNATOR		BOSCH	0-120-689-562	CA1624IR		12624	A12624BO
99	12V	115A			IR	ALTERNATOR		BOSCH	0-123-510-058	CA1254IR		12676	A12676BO
100	12V	120A	CW		IR/EF	ALTERNATOR		BOSCH	0-120-484-021	CA1335IR		12684	A12684BO
101	24V	65A			IR/EF	ALTERNATOR		BOSCH	0-120-468-131	CA1148IR		12706	A12706BO
102	24V	80A			IR	ALTERNATOR		BOSCH	0-120-468-094	CA1438IR		12708	A12708BO
103	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-041			12714	A12714BO
104	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-043			12716	A12716BO
105	24V	100A	CW	S8	IR/IF	ALTERNATOR		BOSCH	0-124-655-007	CA1880IR		12723	A12723BO
106	24V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-655-011			12724	A12724BO
107	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-166			12780	A12780BO
108	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-126	CA1493IR		12781	A12781BO
109	12V	150A			IR/EF	ALTERNATOR		BOSCH	0-124-615-043	114379		12782	A12782BO
110	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-029			12795	A12795BO
111	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-030			12796	A12796BO
112	12V	35A			ER/EF	ALTERNATOR		BOSCH	0-120-400-726, 0-120-400-720	CA854IR		13031	A13031BO
113	12V	45A				ALTERNATOR		BOSCH	120489014	CA140IR		13055	A13055BO
114	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-489-876, 0-120-489-017	CA87IR		13056	A13056BO
115	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-489-074, 0-120-489-075	CA522IR		13107	A13107BO
116	12V	65A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-489-171			13152	A13152BO
117	12V	70A			IR/EF	ALTERNATOR		BOSCH	0-120-489-023, 0-120-489-026	CA287IR		13154	A13154BO
118	12V	65A	CW		IR/EF	ALTERNATOR		BOSCH	0-120-489-756			13203	A13203BO
119	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-489-763	CA316IR		13204	A13204BO
120	12V	100A			IR/IF	ALTERNATOR		BOSCH	0-120-468-009			13235	A13235BO
121	12V	110A			IR/EF	ALTERNATOR		BOSCH	0-120-468-017	CA700IR		13242	A13242BO
122	12V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-469-744, 0-120-469-745	CA335IR		13243	A13243BO
123	12V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-469-784	CA381IR		13244	A13244BO
124	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-120-465-013, 0-120-465-014	CA646IR		13356	A13356BO
125	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-120-465-007, 0-120-465-008	CA855IR		13357	A13357BO
126	12V	110A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-120-465-013, 0-122-500-001, 0	CA1477IR		13359	A13359BO
127	12V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-469-927	CA723IR		13367	A13367BO
128	12V	90A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-469-970, 0-120-469-877			13374	A13374BO
129	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-005, 0-122-215-005	CA724IR		13376	A13376BO
130	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-018	CA1268IR		13380	A13380BO
131	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-120-483-036, 0-122-220-001	CA1263IR, CA726IR		13381	A13381BO

132	12V	120A			IR/IF	ALTERNATOR		BOSCH	0123510007	CA1142IR		13382	A13382BO
133	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-120-465-019, 0-120-465-020, 0-120-465-021	CA829IR		13441	A13441BO
134	12V	100A			IR	ALTERNATOR		BOSCH	0-120-468-119	CA844IR		13462	A13462BO
135	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-120-465-031	CA1092IR		13471	A13471BO
136	12V	100A			IR/IF	ALTERNATOR		BOSCH	0-123-213-003, 0-123-213-004, 0-123-213-005	CA1088IR		13520	A13520BO
137	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-510-001, 0-123-510-002, 0-123-510-003	CA740IR		13605	A13605BO
138	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-510-002, 0-123-510-003, 0-123-510-004	CA733IR		13606	A13606BO
139	12V	50A			IR/EF	ALTERNATOR		BOSCH	0-120-468-214, 0-120-468-215, 0-120-468-216	CA294IR		13607	A13607BO
140	12V	90A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-123-320-011, 0-123-320-020, 0-123-320-021	CA1246IR	443099	13610	A13610BO
141	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-335-002	CA1044IR		13613	A13613BO
142	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-505-011, 0-123-505-012, 0-123-505-013	CA1089IR		13622	A13622BO
143	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-505-009	CA1141IR		13623	A13623BO
144	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-515-016	CA1229IR		13626	A13626BO
145	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-123-500-002, 0-123-500-003, 0-123-500-004			13631	A13631BO
146	12V	108A	CW	S6	IR/IF	ALTERNATOR		BOSCH	9-120-061-601	BXT1346A		13689	A13689BO
147	12V	143A			IR/IF	ALTERNATOR		BOSCH	0-123-510-016, 0-123-510-017, 0-123-510-018	CA1206IR		13710	A13710BO
148	12V	105A	CW	S6	IR/IF	ALTERNATOR		BOSCH	6-004-MA5-008	6-004-MA5-011		13770	A13770BO
149	12V	125A			IR/IF	ALTERNATOR		BOSCH	6-004-ML0-017	6-004-ML0-021		13771	A13771BO
150	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-515-022	CA1591IR		13774	A13774BO
151	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-123-520-006	CA1845IR		13779	A13779BO
152	12V	115A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-986-037-990	009-154-88-02		13797	13797BO=1345
153	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-035	CA1500IR		13798	A13798BO
154	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-019	CA1439IR		13801	A13801BO
155	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-017	CA1443IR		13802	A13802BO
156	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-008			13805	A13805BO
157	12V	130A			IR/IF	ALTERNATOR		BOSCH	0-123-510-096	CA1555IR		13807	A13807BO
158	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-001			13810	A13810BO
159	12V	90A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-123-520-041, 0-123-520-042, 0-123-520-043	CA1209IR		13811	A13811BO
160	12V	130A			IR/IF	ALTERNATOR		BOSCH	0-123-510-073			13812	A13812BO
161	12V	150A	CW	S7	IR/IF	ALTERNATOR		BOSCH	0-123-520-022			13813	A13813BO
162	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-520-010, 0-123-520-011, 0-123-520-012	CA1139IR		13816	A13816BO
163	12V	115A			IR/IF	ALTERNATOR		BOSCH	0-123-510-006, 0-123-510-007, 0-123-510-008	CA1300IR		13819	A13819BO
164	12V	90A			IR/IF	ALTERNATOR		BOSCH	12317501687	CA1256IR		13830	A13830BO
165	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-031	CA1570IR		13832	A13832BO
166	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-510-008	CA1147IR		13833	A13833BO
167	12V	70A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-315-032		443124	13849	A13849BO
168	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-124-315-003	CA1436IR		13850	A13850BO
169	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-001, 0-124-325-002, 0-124-325-003	CA1446IR		13851	A13851BO
170	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-001, 0-124-325-002, 0-124-325-003	CA1378IR		13852	A13852BO
171	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-515-010, 0-124-515-011, 0-124-515-012	CA1394IR	443037	13853	A13853BO
172	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-123-520-017	CA1491IR		13855	A13855BO
173	12V	120A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-515-050	CA1591IR		13882	A13882BO
174	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-030, 0-124-515-031, 0-124-515-032	CA1872IR		13884	A13884BO
175	12V	70A			IR	ALTERNATOR		BOSCH	0 123 310 025	CA1263IR		13902	A13902BO
176	12V	90A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-123-320-018	CA1228IR	443174	13903	A13903BO

177	12V	136A	CW	S6	ER/IF	ALTERNATOR		BOSCH	6-004-ML0-000			13916	A13916BO
178	12V	132A			IR/EF	ALTERNATOR		BOSCH	0-124-525-004	113564		13920	A13920BO
179	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-019	CA1546IR		13921	A13921BO
180	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-986-044-530, 0-124-515-040	CA1588		13922	A13922BO
181	12V	100A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-415-008	CA1053IR		13943	A13943BO
182	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-034	CA1664IR		13951	A13951BO
183	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-016	CA1683IR		13952	A13952BO
184	12V	150A			IR	ALTERNATOR		BOSCH	0-124-615-020	CA1776IR		13953	A13953BO
185	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-088	CA1752IR		13954	A13954BO
186	12V	115A			IR/IF	ALTERNATOR		BOSCH	0-123-510-038	CA1299IR		13972	A13972BO
187	12V	150A	CW	S7	ER/IF	ALTERNATOR		BOSCH	0-124-525-051			13985	A13985BO
188	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-105	CA1826IR		13986	A13986BO
189	12V	136A	CW	S8	ER/IF	ALTERNATOR		BOSCH	0-124-525-041			13987	A13987ND
190	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-001	CA1673IR		13997	A13997BO
191	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-046	CA1689IR		14001	A14001BO
192	12V	34A			IR/EF	ALTERNATOR		BOSCH	0-986-044-581	IA0067		14037	A14037BO
193	12V	55A			IR/EF	ALTERNATOR		BOSCH	F8631270	CA339IR		14390	A14390BO
194	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-489-032, 0-120-489-225	CA186IR		14391	A14391BO
195	12V	90A			IR/EF	ALTERNATOR		BOSCH	0-120-469-601	CA318IR		14471	A14471BO
196	12V	85A			IR/EF	ALTERNATOR		BOSCH	0-120-489-040, 0-120-469-647	CA569IR		14483	A14483BO
197	12V	90A			IR/EF	ALTERNATOR		BOSCH	0-120-489-431, 0-120-469-422	CA320IR		14778	A14778BO
198	12V	65A			IR/EF	ALTERNATOR		BOSCH	0-120-489-016	CA139IR		14779	A14779BO
199	12V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-489-383, 0-120-469-594	CA263IR		14783	A14783BO
200	12V	90A			IR	ALTERNATOR		BOSCH	0-120-469-931	CA708IR		14799	A14799BO
201	12V	90A			IR/EF	ALTERNATOR		BOSCH	0-120-489-777, 0-120-469-378	CA503IR		14813	A14813BO
202	12V	65A			IR/EF	ALTERNATOR		BOSCH	0-120-489-270	CA302IR		14818	A14818BO
203	12V	70A			IR/EF	ALTERNATOR		BOSCH	0-120-489-120, 0-120-489-225	CA345IR		14820	A14820BO
204	12V	28A	CW		IR/EF	ALTERNATOR		BOSCH	0-120-339-514	CA76IR		14949	A14949BO
205	12V	33A			IR/EF	ALTERNATOR		BOSCH	0-120-339-	CA616IR		14951	A14951BO
206	12V	65A			IR/EF	ALTERNATOR		BOSCH	0-120-489-383, 0-120-469-594	CA298IR		14970	A14970BO
207	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-165, 0-124-225-170		443059	20006	A20006BO
208	12V	100A		SC6		ALTERNATOR		BOSCH	0-124-325-172	CA2005IR	443144	20007	A20007BO
209	12V	150A			IR	ALTERNATOR		BOSCH	0-121-015-007, 0-121-615-107			20010	A20010BO
210	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-325-178			20014	A20014BO
211	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-225-051	CA1889IR		20018	A20018BO
212	12V	70A			IR	ALTERNATOR		BOSCH	0-124-315-014	CA1586IR		20086	A20086BO
213	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-315-004, 05072020AA	515084		20100	A20100BO
214	24V	82A			IR	ALTERNATOR		BOSCH	0-124-555-018	CA1917IR		20126	A20126BO
215	24V	112A			IR/IF	ALTERNATOR		BOSCH	0-124-655-014	CA1939IR		20127	A20127BO
216	12V	85A			IR/IF	ALTERNATOR		BOSCH	0-120-484-038	484038		20128	A20128BO
217	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-545	CA2118IR	443085	20149	A20149BO
218	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-488-300	9-127-041-105		20170	A20170BO
219	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-488-301			20171	A20171BO
220	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-488-176	CA1227IR		20230	A20230BO
221	12V	65A	BI	S8	IR/EF	ALTERNATOR		BOSCH	TJG-903-015-A	9-120-080-184		20258	A20258BO

222	12V	100A			IR/IF	ALTERNATOR		BOSCH	0-123-500-008	CA1327IR		20316	A20316BO
223	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-077	920-3178		20325	A20325BO
224	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-225-053	CA1942IR		20327	A20327BO
225	12V	150A			IR	ALTERNATOR		BOSCH		CA1918IR	443049	20332	A20332BO
226	12V	45A	CW		IR	ALTERNATOR		BOSCH	0-120-489-116	CA1201R, CA1101R	443076	20346	A20346BO
227	12V	90A	CW	S6	IR/IF	ALTERNATOR		BOSCH	F000BL0408			20399	A20399BO
228	12V	155A			IR	ALTERNATOR		BOSCH	0-124-525-081	CA1974IR		20411	A20411BO
229	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-425-100	CA1884IR	443052	20417	A20417BO
230	12V	55A			IR	ALTERNATOR		BOSCH	0-120-489-193, 9-120-144-293, A12N222	CA291IR		20433	A20433BO
231	12V	60A			IR	ALTERNATOR		BOSCH	0-120-489-193, A12N222	CA372IR		20455	A20455BO
232	12V	110A	CW	S7	IR/IF	ALTERNATOR		BOSCH	0-986-082-320	CA1700IR		20544	A20544BO
233	12V	70A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-489-347	CA325IR-BO		20604	A20604BO
234	24V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-655-025	CA1997IR		20617	A20617BO
235	12V	75A			IR	ALTERNATOR		BOSCH	A14N144, A14N4	CA314IR		20698	A20698PR
236	12V	90A			IR	ALTERNATOR		BOSCH	0-124-325-141	CA2064IR	443051	20730	A20730BO
237	65A	CW	V1		IR/EF	ALTERNATOR		BOSCH	0-120-489-339, 0-120-489-340, 0-120-489-193, 0-120-489-101	CA353IR		20792	A20792BO
238	12V	70A			IR/EF	ALTERNATOR		BOSCH	0-120-489-193, 0-120-489-101	CA514IR	443166	20819	A20819BO
239	12V	85A	CW	S7	IR/EF	ALTERNATOR		BOSCH	93267989	9-120-080-226		20856	A20856BO
240	12V	65A	CW		IR	ALTERNATOR		BOSCH	0-120-489-341, 0-120-489-342	CA352IR		20873	A20873BO
241	12V	70A			IR	ALTERNATOR		BOSCH	0-120-335-007	CA618IR		20903	A20903BO
242	12V	70A			IR/EF	ALTERNATOR		BOSCH	A13N268	CA711IR		20960	A20960IK
243	12V	70A			IR/EF	ALTERNATOR		BOSCH	0-120-489-491, A12N290	CA574IR		20961	A20961PR
244	12V	45A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-489-373, 0-120-489-376	CA906IR		21108	A21108BO
245	12V	55A	CW	V1	IR	ALTERNATOR		BOSCH	0-120-489-446	CA588IR	443200	21113	A21113BO
246	12V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-489-251	CA306IR		21122	A21122BO
247	12V	70A			IR	ALTERNATOR		BOSCH	0-123-120-001	CA861IR		21149	A21149BO
248	12V	55A			IR/IF	ALTERNATOR		BOSCH	0-123-100-002	CA1066IR		21164	A21164BO
249	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-110-005	CA1146IR		21165	A21165BO
250	12V	120A			IR	ALTERNATOR		BOSCH	0-123-303-001, 0-123-510-062	CA1045IR		21166	A21166BO
251	12V	70A			IR	ALTERNATOR		BOSCH	0-123-310-015	CA1032IR		21177	A21177BO
252	12V	70A			IR/EF	ALTERNATOR		BOSCH	A13N130, A12N176	CA533IR		21182	A21182PR
253	12V	60A			IR/EF	ALTERNATOR		BOSCH		CA889IR		21187	A21187PR
254	12V	70A	CW	S6	IR/EF	ALTERNATOR		BOSCH	0-123-310-029, 0-123-310-052	CA1037IR	443190	21222	A21222BO
255	12V	70A	CW	V1	IR/IF	ALTERNATOR		BOSCH	0-123-310-033, 0-123-310-032	CA1552IR		21223	A21223BO
256	12V	70A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-123-310-023	CA1087IR	443080	21224	A21224BO
257	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-120-485-045	CA852IR		21251	A21251BO
258	12V	70A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-986-039-550	CA1093IR	443087	21253	A21253BO
259	12V	120A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-123-505-004	CA1070IR		21255	A21255BO
260	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-013	CA1151IR		21333	A21333BO
261	12V	90A	CW		IR	ALTERNATOR		BOSCH				21378	A21378BO
262	12V	70A	CW	S5	IR	ALTERNATOR		BOSCH	0-123-110-008	CA1257IR	443180	21384	A21384BO
263	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-123-510-047	CA1144IR	443030	21391	A21391BO
264	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-123-515-017, 0-123-515-020	CA1260IR	443164	21392	A21392BO
265	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-515-003	CA1248IR		21430	A21430BO
266	12V	120A			IR/IF	ALTERNATOR		BOSCH	A31A0491A, A31B0901	CA1646IR		21444	A21444BO

267	12V	80A			IR	ALTERNATOR		BOSCH	0-120-483-023, 0-122-310-026	CA737IR		21447	A21447BO
268	12V	85A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-225-011	CA1575IR		21467	A21467BO
269	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-015	CA1560IR		21480	A21480BO
270	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-038	CA1255IR		21483	A21483BO
271	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-036	CA1239IR		21484	A21484BO
272	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-013	CA1542IR		21491	A21491BO
273	12V	87A			IR/IF	ALTERNATOR		BOSCH	0-124-325-031	CA1544IR		21504	A21504BO
274	12V	75A			IR/IF	ALTERNATOR		BOSCH	0-124-225-010	CA1576IR		21509	A21509BO
275	12V	100A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-415-002, 0-124-515-028	CA1581IR		21515	A21515BO
276	12V	80A			IR	ALTERNATOR		BOSCH	0-123-310-004, 0-122-310-028			21788	A21788BO
277	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-002	CA1509IR		21790	A21790BO
278	12V	90A	CW	S6	IR	ALTERNATOR		BOSCH	0-123-320-030, 0-122-320-067	CA1145IR	443150	21795	A21795BO
279	12V	70A			IR	ALTERNATOR		BOSCH	2541460	CA849IR		21816	A21816PR
280	12V	75A			IR/IF	ALTERNATOR		BOSCH	0-124-315-019, 0-124-315-027, 0-123-310-010, 0-086-020-200	CA1639IR		21890	A21890BO
281	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-325-100	CA1779IR		21891	A21891BO
282	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-012	CA1155IR		21924	A21924BO
283	12V	80A			IR/IF	ALTERNATOR		BOSCH	0-123-310-010, 0-086-020-200	CA1043IR		21925	A21925BO
284	12V	100A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-415-005	CA1501IR		21950	A21950BO
285	12V	70A			IR	ALTERNATOR		BOSCH	2541313	CA635IR		22336	A22336VA
286	12V	90A			IR/IF	ALTERNATOR		BOSCH	27060-0D140	JA1894IR		22518	A22518BO
287	12V	70A			IR/EF	ALTERNATOR		BOSCH	7701499436	CA649IR		22528	A22528BO
288	12V	70A	CW	V1	IR	ALTERNATOR		BOSCH	2541124	CA602IR		22630	A22630IK
289	12V	100A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-415-001	CA1561IR	440856, 443046	22677	A22677BO
290	12V	90A			IR	ALTERNATOR		BOSCH	0-120-409-047, 0-120-460-048	CA712IR		22703	A22703BO
291	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-033	CA1226IR		22708	A22708BO
292	12V	90A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-325-004	074-903-025-K		22710	A22710BO
293	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-021	CA1587IR		22820	A22820BO
294	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-315-035, 0-124-515-057, 0-122-510-106	CA1549IR		22821	A22821BO
295	12V	115A			IR	ALTERNATOR		BOSCH	0-124-325-058	CA1478IR		22822	A22822BO
296	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-058	CA1471IR	443186	22875	A22874BO
297	12V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-325-009	CA1485IR		22898	A22898BO
298	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-047, 0-122-320-062	CA1090IR		22902	A22902BO
299	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-124-315-005	CA1504IR		22913	A22913BO
300	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-320-001	CA1557IR		22922	A22922BO
301	12V	120A			IR	ALTERNATOR		BOSCH	0-124-515-013	CA1445IR		22948	A22948BO
302	12V	150A		SC6	IR/LC	ALTERNATOR		BOSCH	0-122-0AA-1A0	CA1634IR		22952	A22952BO
303	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-016	CA1567IR		22996	A22996BO
304	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-051, 0-122-320-065	CA1489IR		23020	A23020BO
305	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-006	JA1415IR		23024	A23024BO
306	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-005	CA1577IR		23025	A23025BO
307	12V	100A	CW	S6	IR/IF	ALTERNATOR		BOSCH	6204203	CA1748IR	443202	23027	A23027BO
308	12V	120A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	02131-9110, 02141-0113	JA1708IR	443056	23098	A23098PS
309	12V	100A	CW	S5	IR/IF	ALTERNATOR		BOSCH	0-124-415-009, 0-124-415-025	CA1592IR	443196	23106	A23106BO
310	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-059	CA1754IR		23115	A23115BO
311	12V	105A			IR	ALTERNATOR		BOSCH	0-124-415-012	CA1648IR		23125	A23125BO

312	12V	120A	CW	S6	IR	ALTERNATOR		BOSCH	0-124-515-032	CA1582IR	443064	23129	A23129BO
313	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-044	CA1679IR		23177	A23177BO
314	12V	105A	CW	S6	IR/IF	ALTERNATOR		BOSCH	1C1T-10500-AD, 1C1T-10200-AD	415-016, 0-124-415-030		23183	A23183BO
315	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-030	CA1828IR		23185	A23185BO
316	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-320-002	CA1684IR		23187	A23187BO
317	12V	100A			IR/IF	ALTERNATOR		BOSCH	0-124-325-085	CA1907IR		23189	A23189BO
318	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-325-056	CA1729IR		23205	A23205BO
319	12V	150A	CW	S6	IR/IF	ALTERNATOR	SG	BOSCH	2543527,	CA1674IR		23227	A23227VA
320	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-034	CA1074, CA1674IR		23228	A23228BO
321	12V	150A			IR/IF	ALTERNATOR		BOSCH	2542705	CA1850IR		23231	A23231BO
322	12V	110A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-325-050	CA1733IR	443062	23232	A23232BO
323	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-004, 0-124-425-052	CA1858IR		23241	A23241BO
324	12V	140A			IR	ALTERNATOR		BOSCH	0-124-525-012	CA1730IR		23245	A23245BO
325	12V	200A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-625-006	013-154-10-02		23247	A23247BO
326	12V	200A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-625-022	013-154-21-02		23248	A23248BO
327	12V	110A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-525-007, 0-124-525-116	CA1773IR	443171	23251	A23251BO
328	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-045	CA1774IR		23254	A23254BO
329	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-009	CA1811IR		23255	A23255BO
330	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-034	CA1887IR		23261	A23261BO
331	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-019	CA1764IR		23269	A23269BO
332	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-028	CA1775IR		23285	A23285BO
333	12V	90A			IR	ALTERNATOR		BOSCH	0-986-049-101	CA1675IR		23286	A23286BO
334	12V	70A			IR	ALTERNATOR		BOSCH	0-986-048-891	CA1755IR		23287	A23287BO
335	12V	120A	CW	SC5	IR/IF	ALTERNATOR		BOSCH	0-124-515-004	CA1765IR	443034	23295	A23295BO
336	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-031	CA1821IR		23296	A23296BO
337	12V	150A	CW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-525-035	9040003400, 0646221800		23301	A23301BO
338	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124525-035	CA1761IR		23302	A23302BO
339	12V	120A			IR/IF	ALTERNATOR		BOSCH	A3TB2691	CA1741IR		23311	A23311BO
340	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-010	CA1678IR		23320	A23320BO
341	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-031	CA1819IR		23321	A23321BO
342	12V	180A	CW		IR/IF	ALTERNATOR		BOSCH	0-124-625-013	CA1820IR		23322	A23322BO
343	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-515-085	CA1658IR		23334	A23334BO
344	12V	200A			IR/IF	ALTERNATOR		BOSCH	0-124-625-002	CA1701IR		23344	A23344BO
345	12V	110A			IR/IF	ALTERNATOR		BOSCH	06F-903-023-G	CA1818IR		23356	A23356BO
346	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-525-003, 0-124-525-120	CA1810IR		23358	A23358BO
347	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-325-106	CA1815IR		23360	A23360BO
348	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-124-525-044, 0-124-525-005	CA1817IR		23361	A23361BO
349	12V	150A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-124-525-044	CA1827IR		23367	A23367BO
350	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-047	CA1863IR		23368	A23368BO
351	12V	155A			IR/IF	ALTERNATOR		BOSCH	0-124-525-043, 0-124-525-122	CA1824IR		23369	A23369BO
352	24V	80A			IR	ALTERNATOR		BOSCH	0-120-468-140	CA1456IR		23502	A23502BO
353	24V	100A			IR/IF	ALTERNATOR		BOSCH	0-123-525-501	CA1663IR		23513	A23513BO
354	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-011			23528	A23528BO
355	24V	100A			IR/IF	ALTERNATOR		BOSCH	0-124-655-003	CA1693IR		23535	A23535BO
356	12V	155A				ALTERNATOR		BOSCH	0-124-525-536	CA1944IR	440855	23537	A23537BO

357	12V	155A			IR/IF	ALTERNATOR		BOSCH	0-124-525-028	CA1823IR		23540	A23540BO
358	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-525-076	CA1877IR	443065	23542	A23542BO
359	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-124-615-018			23547	A23547BO
360	12V	65A	CW	V1	IR/EF	ALTERNATOR		BOSCH	F865392	CA319IR	443194	23588	A23588BO
361	12V	90A			IR	ALTERNATOR		BOSCH	0-120-469-003	CA842IR		23631	A23631BO
362	12V	60A			IR/IF	ALTERNATOR		BOSCH	0-120-335-010	CA732IR		23677	A23677BO
363	12V	70A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-488-255	CA647IR	443203	23715	A23715BO
364	12V	70A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-488-180, 0-120-488-187	CA516IR		23743	A23743BO
365	12V	98A	CW	SC5	IR/IF	ALTERNATOR		BOSCH	0-124-415-007	CA1628IR		23751	A23751BO
366	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-049	CA1510IR		23770	A23770BO
367	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-123-320-038	CA1297IR		23771	A23771BO
368	12V	120A			IR	ALTERNATOR		BOSCH	0-124-425-039	CA1878IR		23777	A23777BO
369	24V	55A	CW		IR/EF	ALTERNATOR		BOSCH	0-120-469-920	CA550IR		23781	A23781BO
370	12V	120A	CW		IR/IF	ALTERNATOR		BOSCH	0-124-425-036, 0-124-425-066, 0-124-425-067	CA2045IR	443068	23816	A23816BO
371	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-425-097	CA1994IR		23817	A23817BO
372	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-029	CA1860IR		23819	A23819BO
373	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-325-114, 0-124-525-520	CA1986IR		23827	A23827BO
374	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-008	CA1851IR		23833	A23833BO
375	12V	110A	CW		IR/IF	ALTERNATOR		BOSCH	0-124-325-122	CA1915IR		23834	A23834BO
376	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-064	CA1913IR		23838	A23835BO
377	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-066			23865	A23865BO
378	12V	90A	CW	S7	IR/IF	ALTERNATOR		BOSCH	0-124-325-139	CA1866IR	443041	23880	A23880BO
379	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-013	CA1870IR		23882	A23882BO
380	24V	100A			IR/IF	ALTERNATOR		BOSCH	0-124-655-009	CA1871IR		23883	A23883BO
381	12V	150A			IR	ALTERNATOR		BOSCH	0-124-525-082	CA1876IR		23884	A23884BO
382	24V	80A			IR/IF	ALTERNATOR		BOSCH	0-124-555-014	CA1847IR		23887	A23887BO
383	12V	85A				ALTERNATOR		BOSCH		CA2024IR		23901	A23901BO
384	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-124-425-005	CA1833IR		23916	A23916BO
385	12V	150A	CW	SD6	IR/IF	ALTERNATOR		BOSCH	0-121-615-002	9676143580	443055	23925	A23925BO
386	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-121-615-009	CA1970IR		23953	A23953BO
387	12V	100A	CW	S5	IR	ALTERNATOR		BOSCH	0-124-325-171	CA1940IR	443102	23961	A23961BO
388	12V	150A	CW	SC5	IR/IF	ALTERNATOR		BOSCH	0-121-615-005, 0-121-615-105	CA1968IR	443126	23976	A23976BO
389	12V	150A	CW	SD7	IR/IF	ALTERNATOR		BOSCH	0-121-615-102	CA1922IR	443120	23977	A23977BO
390	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-121-615-101	CA2018IR		24027	A24027PS
391	12V	125A	CW	SC7	IR	ALTERNATOR		BOSCH	0-124-425-076, 0-124-425-074	CA1945IR		24044	A24044BO
392	12V	140A			IR/IF	ALTERNATOR		BOSCH	0-124-525-027	CA1841IR		24090	A24090BO
393	12V	85A			IR	ALTERNATOR		BOSCH	0-120-484-039	BXH1241A		24131	A24131BO
394	24V	55A			IR/EF	ALTERNATOR		BOSCH	0-120-484-040	484040		24132	A24132BO
395	12V	110A			IR/IF	ALTERNATOR		BOSCH	0-120-465-015	CA1081IR			CA1081IR
396	12V	110A				ALTERNATOR		BOSCH		CA1381IR			
397	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-123-510-000, 0-123-510-024	BXN1231A			BXN1231A
398	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-122-510-062	CA1731IR			CA1731IR
399	12V	120A			IR/IF	ALTERNATOR		BOSCH	0-120-465-019, 0-120-465-021	CA828IR			CA828IR
400	12V	150A			IR/IF	ALTERNATOR		BOSCH	0-123-515-013, 0-122-515-028	CA1204IR			CA1204IR
401	12V	35A			IF/ER	ALTERNATOR		BOSCH	9-120-080-183	AL183			

402	12V	55A				ALTERNATOR		BOSCH	9-120-690-170	BX690170			
403	12V	60A				ALTERNATOR		BOSCH	0-120-488-313	BXD1242A			
404	12V	70A				ALTERNATOR		BOSCH	0-120-484-037	BXT1250A			
405	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-123-310-006	CA1106IR			
406	12V	70A			IR/EF	ALTERNATOR		BOSCH	0071545402	CA321IR			
407	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-120-485-043	CA827IR			CA827IR
408	12V	70A			IR/IF	ALTERNATOR		BOSCH	0-120-485-022	CA833IR			CA833IR
409	12V	80A			IR/EF	ALTERNATOR		BOSCH	0-120-409-890, 0-120-469-025	CA714IR			
410	12V	85A				ALTERNATOR		BOSCH	0-120-484-032	BXF1255A			
411	12V	85A				ALTERNATOR		BOSCH	0-120-484-042	BXF1259A			
412	12V	90A			IR/IF	ALTERNATOR		BOSCH	0-124-325-098				
413	24V	110A				ALTERNATOR		BOSCH	0-124-655-026	655026			
414	24V	55A				ALTERNATOR		BOSCH	0-120-488-316	488316			
415	24V	55A			IR	ALTERNATOR		BOSCH	0-120-450-007	CA595IR			
416	12V	65A	CW		IR/IF	ALTERNATOR		BOSCH	0-120-488-172	CA517IR	443184		A20872BO
417	12V	90A	CW	V1	IR/EF	ALTERNATOR		BOSCH	0-120-469-021	CA610IR	443161		A13625BO
418	12V	90A	CW	V1	IR/EF	ALTERNATOR		BOSCH	026903015B	CA320IR	443167		A14396BO
419	12V	150A	CW		IR/IF	ALTERNATOR		BOSCH	0-124-525-533	CA1827IR	443053		A23872BO
420	12V	180A			IR/IF	ALTERNATOR		BOSCH	0-121-715-004	CA1820IR	440861, 443058		A20009BO
421	12V	110A	CW	S7	IR/IF	ALTERNATOR		BOSCH	0-124-325-053	CA1700IR	443132		A12578BO
422	12V	70A	CW	S6	IR/IF	ALTERNATOR		BOSCH	0-123-310-006	CA1106IR	443141		A13619BO
423	12V	140A	CCW	SC6	IR/IF	ALTERNATOR		BOSCH	0-124-525-014	CA1673IR	443181		A13998BO
424	12V	75A	CW	S5	IR/IF	ALTERNATOR		BOSCH	9120080172				220-069
425	12V	65A				ALTERNATOR		Daewoo				24001	A24001DW
426	12V	63A	CW	V2	IR/EF	ALTERNATOR	10SI	DELCO	1102494			7127	A7127DR
427	24V	40A	CW	V1	IR/EF	ALTERNATOR	10SI	DELCO	1102916			7129	A7127DR-24V
428	12V	80A	CW	V1	IR/EF	ALTERNATOR	27SI	DELCO	1101016	10463100		7135	A7135DR
429	12V	65A	BI		IR/EF	ALTERNATOR	27SI	DELCO	1105461,	20-126-1		7136	A7136DR
430	12V	80A	BI	S8	IR/EF	ALTERNATOR	27SI	DELCO	1100072,	20-124-1		7138	A7138DR
431	12V	72A	BI		IR/EF	ALTERNATOR	10SI	DELCO	1984279	1102933		7150	A7150DR
432	12V	100A	BI		IR/EF	ALTERNATOR	27SI	DELCO	1100096	1100216		7161	A7161DR
433	24V	45A	CW	S8	IR/EF	ALTERNATOR	10SI	DELCO	10480060	1101195		7176	A7176DR-SE
434	24V	65A	BI		IR/EF	ALTERNATOR	27SI	DELCO	10459244	1984277		7197	A7197DR
435	24V	70A	BI		IR/EF	ALTERNATOR	25SI	DELCO	1117238	1117249		7252	A7252DR
436	24V	50A	BI		IR/EF	ALTERNATOR	25SI	DELCO	1117230,	10459064,		7254	A7254DR
437	12V	75A	BI	V2	IR/EF	ALTERNATOR	25SI	DELCO	10459003	1117225		7255	A7255DR
438	12V	90A	CW	V2	IR/EF	ALTERNATOR	30SI	DELCO	1117068	1117067		7256	A7256DR
439	12V	90A	BI	V2	IR/EF	ALTERNATOR	30SI	DELCO	1117732	10459001		7262	A7262DR
440	24V	60A	BI		IR/EF	ALTERNATOR	30SI	DELCO	1117734,	1117734		7263	A7263DR
441	12V	60A	BI	S7	IR/EF	ALTERNATOR	20SI	DELCO	1117611	1-1912-01DR		7266	A7266DR
442	24V	45A	BI		IR/EF	ALTERNATOR	20SI	DELCO	1117642	20-118		7297	A7297DR
443	12V	130A	CW	V2	IR/EF	ALTERNATOR	21SI	DELCO	19010137,			7564	A7564DR
444	12V	115A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117886	10459017,		7641	A7641DR
445	12V	145-160A	CW	VARIOUS	IR/EF	ALTERNATOR	21SI	DELCO	1117933,	10459051		7644	A7644DR
446	12V	115A	BI	V2	IR/EF	ALTERNATOR	21SI	DELCO	1117932			7659	A7659DR

447	12V	115A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117892	10459043		7662	A7662DR
448	12V	160A	BI	S4	IR/EF	ALTERNATOR	21SI	DELCO	1117899	1117938		7665	A7665DR
449	12V	100A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117903,	10459046		7666	A7666DR
450	12V	115A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117947	10459047		7667	A7667DR
451	12V	130A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117965,	10459040,		7673	A7673DR
452	12V	145-160A	CW		IR/EF	ALTERNATOR	21SI	DELCO	1117934			7679	A7679DR
453	12V	130A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117943			7681	A7681DR
454	12V	115A	BI		IR/EF	ALTERNATOR	21SI	DELCO	10459047	10459037		7683	A7683DR
455	12V	145A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117964			7685	A7685DR
456	12V	145A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117921			7686	A7686DR
457	12V	105A	CW	S8	IR/EF	ALTERNATOR	CS130	DELCO	10479976	1-1842-01DR		7687	A7687DR
458	12V	85A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10497113	10497112		7807	A7807DR
459	12V	100A	CW	V1	IR/EF	ALTERNATOR	CS130	DELCO	10497115	10497106		7820	A7820DR
460	12V	100A	BI	S8	IR/EF	ALTERNATOR	27SI	DELCO	1100091,	20-125-1		7850	A7850DR
461	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101136	10463010		7859	A7859DR
462	12V	85A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10463011	1-1623-31DR		7867	A7867DR
463	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463097	10463007		7887	A7887DR
464	12V	100A			IR/EF	ALTERNATOR	CS130	DELCO	10463066, 10463061			7927	A7927DR
465	12V	105A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10479963	10463264		7933	A7933DR
466	12V	105A	BI		IR/EF	ALTERNATOR	30SI	DELCO	1117811,	10459008		7940	A7940DR
467	12V	105A	BI		IR/EF	ALTERNATOR	30SI	DELCO	10459369	1117807		7947	A7947DR
468	24V	100A	BI		IR/EF	ALTERNATOR	30SI	DELCO	1117817	20-132-1		7965	A7965DR
469	12V	140A			IR/EF	ALTERNATOR	CS144	DELCO	10463190, 10463285,			7966	A7966DR
470	12V	140A			IR/EF	ALTERNATOR	CS144	DELCO	1101847			7969	A7969DR
471	12V	130A	BI	S7	IR/EF	ALTERNATOR	21SI	DELCO	1117904,	10459049,		7971	A7971DR
472	12V	96A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463079	1101267		7973	A7973DR
473	24V	80A	BI		IR/EF	ALTERNATOR	30SI	DELCO	021103628A	1117821		7975	A7975DR
474	12V	100A	BI	VARIOUS	IR/EF	ALTERNATOR	21SI	DELCO	19010136,	10459017		7976	A7976DR
475	12V	75A			IR/IF	ALTERNATOR	CS121D	DELCO	10480073	CA1396IR-4pin		8005	A8005DR
476	12V	75A			IR/IF	ALTERNATOR	CS121D	DELCO		CA1386IR		8006	A8006DR
477	24V	70A	CCW		IR/EF	ALTERNATOR	21SI	DELCO	19010185,	19010185		8007	A8007DR
478	12V	100A	CW	V1	IR/EF	ALTERNATOR	21SI	DELCO	1117942			8012	A8012DR
479	12V	160A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117922	1-2334-00DR		8023	A8023DR
480	12V	130A	CW		IR/EF	ALTERNATOR	21SI	DELCO	1117949			8027	A8027DR
481	12V	125A	BI		IR/EF	ALTERNATOR	21SI	DELCO	1117898	1117898		8029	A8029DR
482	24V	70A	CW		IR/EF	ALTERNATOR	21SI	DELCO	1117915	1-2292-00DR-1		8030	A8030DR
483	12V	100A	CW		IR/EF	ALTERNATOR	22SI	DELCO	19020308	10459215		8070	A8070DR
484	12V	130A	CW		IR/EF	ALTERNATOR	22SI	DELCO	10459192	10459189		8072	A8072DR
485	12V	130A	CW		IR/EF	ALTERNATOR	22SI	DELCO	19020309,	1-2431-00DR		8073	A8073DR
486	12V	100A	CW		IR/EF	ALTERNATOR	22SI	DELCO	10459255	10459204		8074	A8074DR
487	12V	130A	CW		IR/EF	ALTERNATOR	22SI	DELCO	19020304	10459212		8075	A8075DR
488	12V	145A	CW		IR/EF	ALTERNATOR	22SI	DELCO	19020310	1-2280-00DR-1		8076	A8076DR
489	12V	130A			IR/EF	ALTERNATOR	22SI	DELCO	10459292, 10459252			8078	A8078DR
490	12V	145A	CW		IR/EF	ALTERNATOR	22SI	DELCO	10459205	10459254		8079	A8079DR
491	12V	110A	BI		IR/EF	ALTERNATOR	33SI	DELCO	10459183,			8080	A8080DR

492	12V	110A	BI		IR/EF	ALTERNATOR	33SI	DELCO	10459182,			8081	A8081DR
493	12V	135A	BI		IR/EF	ALTERNATOR	33SI	DELCO	10459181,			8083	A8083DR
494	24V	100A	BI		IR/EF	ALTERNATOR	33SI	DELCO	10459251,	10459251		8085	A8085DR
495	12V	110A	BI		IR/EF	ALTERNATOR	34SI	DELCO	19011157	1-2060-00DR		8090	A8090DR
496	12V	135A	BI		IR/EF	ALTERNATOR	34SI	DELCO	19011167	1-2078-00DR		8092	A8092DR
497	12V	135A	CW		IR/EF	ALTERNATOR	34SI	DELCO	10459290	10459287		8093	A8093DR
498	24V	100A	BI		IR/EF	ALTERNATOR	34SI	DELCO	19011168	19011208		8094	A8094DR
499	12V	110A	BI		IR/EF	ALTERNATOR	34SI	DELCO	10459284	10459279		8095	A8095DR
500	12V	135A	BI		IR/EF	ALTERNATOR	34SI	DELCO	10459278	10459285		8096	A8096DR
501	12V	135A	BI		IR/EF	ALTERNATOR	34SI	DELCO	10459289	10459288		8097	A8097DR
502	12V	85A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	21020854	21021310		8107	A8107DR
503	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463358,			8112	A8112DR
504	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463377,			8127	A8127DR
505	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480052	1-1797-01DR-1		8155	A8155DR
506	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480071	1-1799-01DR-1		8156	A8156DR
507	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480017	1-1802-21DR-1		8160	A8160DR
508	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463323,			8172	A8172DR
509	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463409,			8183	A8183DR
510	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463023,			8192	A8192DR
511	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463034,			8193	A8193DR
512	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480125,				
513	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480182	1-1985-01DR		8200	A8200DR
514	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10480167	1-1995-21DR-1		8206	A8206DR
515	12V	96A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10463081,			8213	A8213DR
516	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463044,				
517	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	21022772	21022893		8215	A8215DR
518	12V	130A	CW	S6	IR/IF	ALTERNATOR	AD244	DELCO	10480453			8219	A8219DR
519	12V	100A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10464405	10480234		8220	A8220DR
520	12V	105A	CW	S7	IR/IF	ALTERNATOR	AD230	DELCO	10479923	10479384		8237	A8237DR
521	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	19244728	10480326		8239	A8239DR
522	12V	105A	CW	S5	IR/IF	ALTERNATOR	CS130D	DELCO	10480405,			8247	A8247DR
523	12V	85A			IR/IF	ALTERNATOR	CS121D	DELCO	10480247			8248	A8248DR
524	12V	150A	CW	S6	IR/IF	ALTERNATOR	AD244	DELCO	CA1671IR			8275	A8275DR
525	12V	145A	CW	S6	IR/IF	ALTERNATOR	DR44G	DELCO				8280	A8280DR
526	12V	160A	CW	S6	IR/IF	ALTERNATOR	DR44G	DELCO	10464468	15062413		8290	A8290DR
527	12V	145A	CW	S6	IR/IF	ALTERNATOR	DR44G	DELCO	15200109	334-2529		8292	A8292DR
528	12V	100A	CW		IR/EF	ALTERNATOR	22SI	DELCO	15093928	15857608		8301	A8301DR
529	12V	130A			IR/EF	ALTERNATOR	22SI	DELCO	10392759	15200268		8302	A8302DR
530	12V	150A	CW		IR/EF	ALTERNATOR	22SI	DELCO	10459318	19020387		8360	A8360DR
531	24V	70A			IR/EF	ALTERNATOR	22SI	DELCO	10459320	19020388,		8361	A8361DR
532	12V	85A	CW	S6	IR/IF	ALTERNATOR	AD221	DELCO	19020389,	1-2428-00DR		8362	A8362DR
533	12V	105A	CW	S6	IR/IF	ALTERNATOR	KOREA	DELCO	10459306	10459333		8367	A8367DR
534	12V	145A	CW	SC6	IR/IF	ALTERNATOR	DR44G	DELCO	96540542	1-2977-01DR		8483	A8483DR
535	24V	105A	BI		IR/EF	ALTERNATOR	36SI	DELCO	96408588			8484	A8484DR
536	12V	75A			IR/IF	ALTERNATOR	CS130D	DELCO	15845338	15845337		8489	A8489DR
									8600369			8541	A8541DR
									7700872258	CA1253IR		8547	A8547DR

537	24V	75A	BI		IR/EF	ALTERNATOR	34SI	DELCO	19011191, 10011205			8561	A8561DR
538	24V	75A	BI		IR/EF	ALTERNATOR	34SI	DELCO	10459354	19011207	ADR0461	8562	A8562DR
539	24V	100A	BI		IR/EF	ALTERNATOR	34SI	DELCO	19011185			8576	A8576DR
540	12V	135A	BI		IR/EF	ALTERNATOR	35SI	DELCO	19011258	8700004		8597	A8597DR
541	12V	140A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8700016	8600064		8607	A8607DR
542	12V	140A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8700017	8600065		8608	A8608DR
543	12V	140A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8700018	8600066		8609	A8609DR
544	24V				IR/EF	ALTERNATOR	35SI	DELCO	8700018			8609	A8609DR-24V
545	24V	95A	BI		IR/EF	ALTERNATOR	36SI	DELCO	8600110			8610	A8610DR
546	12V	170A	BI		IR/EF	ALTERNATOR	36SI	DELCO	8600126	8700046		8612	A8612DR
547	12V	170A	BI		IR/EF	ALTERNATOR	36SI	DELCO	8600125	8700045		8613	A8613DR
548	12V	170A	BI		IR/EF	ALTERNATOR	36SI	DELCO	8600127	8700047		8614	A8614DR
549	12V	100A			IR/EF	ALTERNATOR	24SI	DELCO	8600032	8700011		8701	A8701DR
550	12V	145A	CW		IR/IF	ALTERNATOR	24SI	DELCO	19020901	8700009		8703	A8703DR
551	12V	160A			IR/IF	ALTERNATOR	24SI	DELCO	8600153			8704	A8704DR
552	12V	145A	CW		IR/IF	ALTERNATOR	24SI	DELCO	19020900, 8600162			8706	A8706DR
553	12V	160A			IR/IF	ALTERNATOR	24SI	DELCO	8600043			8707	A8707DR
554	24V	70A	CW		IR/IF	ALTERNATOR	24SI	DELCO	8600017			8709	A8709DR
555	12V	160A			IR/IF	ALTERNATOR	24SI	DELCO	8600310			8718	A8718DR
556	12V	160A			IR/IF	ALTERNATOR	24SI	DELCO	8600889			8719	A8719DR
557	12V	200A	CW		IR/IF	ALTERNATOR	28SI	DELCO	8600314			8741	A8741DR
558	12V	200A	CW		IR/IF	ALTERNATOR	28SI	DELCO	8600313			8743	A8743DR
559	12V	200A	CW		IR/IF	ALTERNATOR	28SI	DELCO	8600307			8745	A8745DR
560	12V	300A	CW		IR/EF	ALTERNATOR	40SI	DELCO	8600298			8752	A8752DR
561	24V	110A			IR/IF	ALTERNATOR	28SI	DELCO	8600469			8762	A8762DR
562	12V	100A			IR/IF	ALTERNATOR	CS130D	DELCO	0 986 042 740	CA1391IR		21516	A21516DR
563	12V	100A		SC6	IR/IF	ALTERNATOR		DELCO	8400157	CA2010IR	443092	24092	A24092DR
564	12V	140A			IR/IF	ALTERNATOR	DR37	DELCO	DRA2075N	CA2017IR		24095	A24095DR
565	12V	63A	CW	V2	IR/EF	ALTERNATOR	10SI	DELCO	1105522	1105556		7127-3	A7127-3DR
566	12V	63A	CW	V2	IR/EF	ALTERNATOR	10SI	DELCO	1100131	1100125		7127-12	A7127-12DR
567	12V	72A	CW		IR/EF	ALTERNATOR	10SI	DELCO	1100587			7177-12	A7177DR-12
568	12V	60A	CW		IR/EF	ALTERNATOR	10SI	DELCO	1100589	1100593		7185-3	A7185DR-3
569	12V	61A	CW		IR/EF	ALTERNATOR	10SI	DELCO	1100491	1100578		7185-12	A7185DR-12
570	12V	105A	CW		IR/EF	ALTERNATOR	10SI	DELCO	1100171	1102930	7186-SE	7186-12	A7186DR-12
571	12V	78A	CW	S4	IR/EF	ALTERNATOR	12SI	DELCO	10463059	1105623	7273-9	7273-3	A7273DR-3
572	12V	66A	CW	V1	IR/EF	ALTERNATOR	12SI	DELCO	1105566	1101303, 1101305, 1105567		7292-3	A7292DR-3
573	12V	94A	CW	V1	IR/EF	ALTERNATOR	12SI	DELCO	1105545			7294-3	A7294DR-3
574	12V	94A	CW	V1	IR/EF	ALTERNATOR	12SI	DELCO	1101240	20-110		7294-9	A7294DR-9
575	12V	94A	CW	V1	IR/EF	ALTERNATOR	12SI	DELCO	10463060	10463397		7294-12	A7294DR-12
576	12V	100A	CW	S4	IR/EF	ALTERNATOR	CS130	DELCO	10463004	10497119		7801-3	A7801DR-3
577	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463117	1101475		7801-7	A7801DR-7
578	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463019	1101145		7801-11	A7801DR-11
579	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463039	10463416		7802-3	A7802DR-3
580	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463028	1101184		7802-7	A7802DR-7
581	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463186	1101814		7802-11	A7802DR-11

582	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101158	10497145		7803-7	A7803DR-7
583	12V	108A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10430319, 10407107			7805-11	A7805DR-11
584	12V	85A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463061	10463024		7808-7	A7808DR-7
585	12V	100A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10463012	1101138		7858-11	A7858DR-11
586	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463367	10479974		7860-3	A7860DR-3
587	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463174	10479895		7860-7	A7860DR-7
588	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463211	1101583		7860-11	A7860DR-11
589	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101500	1-1629-11DR		7861-3	A7861DR-3
590	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463111	1101318		7861-7	A7861DR-7
591	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10479906	1-1629-31DR		7861-11	A7861DR-11
592	12V	120A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463027, 10463026,			7864-5	A7864DR-5
593	12V	120A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463062			7864-11	A7864DR-11
594	12V	85A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463020	10463034		7880-3	A7880DR-3
595	12V	85A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	1101191	10463043		7886-11	A7886DR-11
596	12V	105A	CW	V1	IR/EF	ALTERNATOR	CS130	DELCO	10463106	1101275		7888-3	A7888DR-3
597	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463025	1-1638-22DR		7888-7	A7888DR-7
598	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101127	1-1638-32DR		7888-11	A7888DR-11
599	12V	105A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	1101807	10463048		7891-3	A7891DR-3
600	12V	85A	CW	V1	IR/EF	ALTERNATOR	CS130	DELCO	10463179	1101634		7894-11	A7894DR-11
601	12V	85A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101170	1-1645-31DR		7897-11	A7897DR-11
602	12V	120A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463132, 1101401			7901-2	A7901DR-2
603	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463036	10463035		7902-11	A7902DR-11
604	12V	96A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463620	10480098		7903-11	A7903DR-11
605	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463091	1101101,		7910-3	A7910DR-3
606	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463094	1-1647-31DR		7914-11	A7914DR-11
607	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101254	1-1644-31DR		7917-11	A7917DR-11
608	12V	120A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10463121, 10463122			7942-2	A7942DR-2
609	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463145	1101480		7960-3	A7960DR-3
610	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463263	10479962		7964-7	A7964DR-7
611	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463182	10463345		7964-11	A7964DR-11
612	12V	105A	CW	V1	IR/EF	ALTERNATOR	CS130	DELCO	10463183	1101806		7977-11	A7977DR-11
613	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463165	10463245		7981-7	A7981DR-7
614	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10479954	1-1649-21DR		8103-7	A8103-7DR
615	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463525	10480127		8103-11	A8103-11DR
616	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463375	1101644		8114-3	A8114DR-3
617	12V	105A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10480028	10463387		8116-7	A8116DR-7
618	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	1101271	321-469		8137-7	A8137DR-7
619	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463369	10480035		8137-11	A8137DR-11
620	12V	100A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10463443	10480072		8160-5	A8160DR-5
621	12V	100A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10463407	10463631		8160-7	A8160DR-7
622	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10463408	10480017		8160-11	A8160DR-11
623	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463418	10480087		8165-3	A8165DR-3
624	12V	105A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10463387	10480028		8165-7	A8165DR-7
625	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10480086	10463417		8165-11	A8165DR-11
626	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10480088	10463419		8166-11	A8166DR-11

627	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463422	10480091		8167-11	A8167DR-11
628	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10479994	10463339		8168-7	A8168DR-7
629	12V	100A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463532	10480137		8169-7	A8169DR-7
630	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463411	10480025		8171-7	A8171DR-7
631	12V	105A	CW	S5	IR/EF	ALTERNATOR	CS130	DELCO	10463604	10480055		8189-7	A8189DR-7
632	12V	105A	CW	S5	IR/IF	ALTERNATOR	CS130D	DELCO	10464087	10463639		8199-2	A8199-2DR
633	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10463640	10480172		8202-7	A8202DR-7
634	12V	100A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10463651	10480167		8206-5	A8206DR-5
635	12V	105A	CW	S6	IR/EF	ALTERNATOR	CS130	DELCO	10464094	10480265		8225-7	A8225DR-7
636	12V	140A	CW	S6	IR/EF	ALTERNATOR	CS144	DELCO	10464088, 10480206			8226-11	A8226DR-11
637	12V	102A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480299	1-2135-01DR		8230-7	A8230DR-7
638	12V	100A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10480251	1-2156-21DR		8231-5	A8231DR-5
639	12V	105A	CW	S5	IR/IF	ALTERNATOR	CS130D	DELCO	10464431	10464410		8275-2	A8275DR-2
640	12V	150A	CW	S7	IR/IF	ALTERNATOR	AD244	DELCO	10464480	15087024		8496-9	A8496DR-9
641	12V	100A	CW		IR/EF	ALTERNATOR	22SI	DELCO	10459191,	1-2044-00DR		8071,8078	A8071DR
642	12V	110A	BI		IR/EF	ALTERNATOR	33SI	DELCO	19011150	1-2077-00DR		8080,8081	A8080DR
643	12V	135A	BI		IR/EF	ALTERNATOR	33SI	DELCO	10459180,	1-2057-00DR		8082,8083	A8082DR
644	24V	40A	CW	V1				DELCO				7127-24V=712	A7127DR-24V
645	12V	63A	CW	V2		ALTERNATOR		DELCO				7127-SE	A7127DR-SE
646	12V	105A	CW	V2	IR/EF	ALTERNATOR	10SI	DELCO	1100111	1100116		7127-SE	A7127DR-SE
647	12V	94A	CW	V1	IR/EF	ALTERNATOR	12SI	DELCO		1-1749-11DR-2		7294-SE	A7294DR-SE
648	24V	70A	CW		IR/EF	ALTERNATOR	21SI	DELCO	1117897	1-2291-00DR		7642=8003	A7642DR
649	12V	160A	CW		IR/EF	ALTERNATOR	21SI	DELCO	1117917			8020=7685	A8020DR
650	12V	85A	CW	S6	IR/IF	ALTERNATOR	AD221	DELCO	96540542			8483-2PIN	A8483DR-2PIN
651	12V	85A	CW	S6	IR/IF	ALTERNATOR	AD221	DELCO	96540541			8483-3PIN	A8483DR-3PIN
652	24V	100A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8600064	8700016		8607-24V	A8607DR-24V
653	24V	100A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8600065	8700017		8608-24V	A8608DR-24V
654	24V	100A	BI		IR/EF	ALTERNATOR	35SI	DELCO	8600066	8700018		8609-24V	A8609DR-24V
655	24V	70A				ALTERNATOR		DELCO	19010195	UA1620IR			
656	12V	105A	CW	S6	IR/IF	ALTERNATOR	CS130D	DELCO	10479914	CA1070IR Opel typ	443205		A8546DR
657	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3210, 104210-3212			11000	A11000ND
658	12V	100A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3280	1-2600-01ND		11003	A11003ND
659	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3500	1-2974-01ND		11030	A11030ND
660	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3650	3750,3751		11032	A11032ND
661	12V	100A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-362	3620,3790,4180,		11033	A11033ND
662	12V	100A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-388	,3890,5330		11034	A11034ND
663	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4540	104210-3300		11035	A11035ND
664	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3340			11037	A11037ND
665	12V	150A	CW	S5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3200, 104210-3261			11038	A11038ND
666	12V	136A	CW	S4	ER/IF	ALTERNATOR	HAIRPIN	DENSO	121000-348	421000-0150		11040	A11040ND
667	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4430	1-2575-01ND		11044	A11044ND
668	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4430	104210-3191		11046	A11046ND
669	12V	150A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	210-0564	421000-0180		11048	A11048ND
670	12V	105A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-2230			11049	A11049ND
671	12V	150A	CW	SC5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3560			11054	A11054ND

672	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO		1-3060-01ND		11062	A11062ND
673	12V	136A	CW	SC6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	0300,0301,0302,0	421000-0300		11063	A11063ND
674	12V	130A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4030	9664219-403		11084	A11084ND
675	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-1950			11085	A44085ND
676	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3460	1-2936-01ND		11087	A11087ND
677	12V	100A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3780	1-2937-01ND		11088	A11088ND
678	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3390	9664219-339		11090	A11090ND
679	12V	150A	CW	SC5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4050		443155	11093	A11093ND
680	12V	136A	CW	S6	ER/IF	ALTERNATOR		DENSO	421000-4590			11094	A11094ND
681	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3100	210-0529		11099	A11099ND
682	12V	140A	CW	S5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4330	104210-4330		11110	A11110ND
683	12V	140A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0332	421000-0251		11112	A11112ND
684	12V	140A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	0260,0261,0262,0	1-2578-01ND		11113	A11113ND
685	12V	150A	CW	SD6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4241	104210-4240		11114	A11114ND
686	12V	136A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4530			11116	A11116ND
687	12V	125A	CW	S7	IR/IF	ALTERNATOR		DENSO	104210-8040	210-0617		11128	A11128ND
688	12V	100A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4471	104210-4470		11136	A11136ND
689	12V	130A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4890	104210-2100		11137	A11137ND
690	12V	100A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4230			11138	A11138ND
691	12V	130A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4200	1-2969-01ND		11139	A11139ND
692	12V	105A	CW	S5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4420	1-2805-01ND-2		11140	A11140ND
693	12V	145A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4990			11146	A11146ND
694	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4300	1-2970-01ND		11150	A11150ND
695	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4690			11151	A11151ND
696	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	104210-8010			11152	A11152ND
697	12V	100A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3680			11153	A11153ND
698	12V	160A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0360	421000-0363		11155	A11155ND
699	12V	155A	CW	S6	IR/EF	ALTERNATOR	HAIRPIN	DENSO	104210-5070			11156	A11156ND
700	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4370			11178	A11178ND
701	12V	135A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4220			11179	A11179ND
702	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4360			11180	A11180ND
703	12V	220A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6000	1-3154-01ND		11181	A11181ND
704	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4560	104210-4560		11183	A11183ND
705	12V	80A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-8110			11194	A11194ND
706	12V	100A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4880	1-3043-01ND		11195	A11195ND
707	12V	150A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2051,	1-3010-01ND		11196	A11196ND
708	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4000			11197	A11197ND
709	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4510			11198	A11198ND
710	12V	100A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4790			11201	A11201ND-NP
711	12V	150A	CW	S6	IR/IF	ALTERNATOR		DENSO	104210-3900, TN104210-5060			11204	A11204ND
712	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3701	104210-3700		11205	A11205ND
713	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3690	104210-3690		11206	A11206ND
714	12V	150A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5380			11237	A11237ND
715	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4091			11238	A11238ND
716	12V	160A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0500	1-2854-01ND		11240	A11240ND

717	12V	160A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0550	210-0635		11241	A11241ND
718	12V	136A	CW	S6	ED/IF	ALTERNATOR		DENSO	121000-4630			11242	A11242ND
719	12V	136A	CW	S4	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0371	A-80334		11244	A11244ND
720	12V	170A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6010			11251	A11251ND
721	12V	170A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6160			11252	A11252ND
722	12V	136A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0430			11276	A11276ND
723	12V	136A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0380			11285	A11285ND
724	12V	140A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0390			11286	A11286ND
725	12V	200A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	6100,6103			11290	A11290ND
726	12V	130A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5432	210-0643		11291	A11291ND
727	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5970	210-0703		11292	A11292ND
728	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5820			11293	A11293ND
729	12V	160A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0700			11295	A11295ND
730	12V	160A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0480	4801480AB		11296	A11296ND
731	12V	160A	CW	S7	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0410	210-0636		11298	A11298ND
732	12V	160A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0730	1-3136-02ND		11299	A11299ND
733	12V	100A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4740			11322	A11322ND
734	12V	130A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4750			11323	A11323ND
735	12V	100A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4921,	104210-4920		11324	A11324ND
736	12V	130A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5510			11326	A11326ND
737	12V	180A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6130, 104210-6121			11328	A11328ND
738	12V	100A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5100	210-0640		11350	A11350ND
739	12V	130A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5080			11351	A11351ND
740	12V	150A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5090	210-0697		11352	A11352ND
741	12V	180A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6191	A-80555		11353	A11353ND
742	12V	80A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-8230	210-0664		11354	A11354ND
743	12V	170A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6030	A-80617		11366	A11366ND
744	12V	145A	CW	SC8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0510			11378	A11378ND
745	12V	220A	CW	SC8	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-7001			11379	A11379ND
746	12V	180A	CW	S7	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-7010	A-80385		11380	A11380ND
747	12V	140A	CW	S6	ED/IF	ALTERNATOR		DENSO	421000-0460	05033759AC		11381	A11381ND
748	12V	160A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0620			11383	A11383ND
749	12V	100A	CW	SD6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5491	27060-0T040		11385	A11385ND
750	12V	100A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5481	27060-37040		11386	A11386ND
751	12V	130A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5890			11390	A11390ND
752	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5920			11391	A11391ND
753	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5910			11392	A11392ND
754	12V	150A	CW	S6	ED/IF	ALTERNATOR		DENSO	421000-0650	04801483AA		11401	A11401ND
755	12V	180A	CW	S8	IR/EF	ALTERNATOR	HAIRPIN	DENSO	104210-6140	27060-38050		11405	A11405ND
756	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5830			11429	A11429ND
757	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4700			11430	A11430ND
758	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5630			11431	A11431ND
759	12V	155A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5860	210-0702		11432	A11432ND
760	12V	195A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6181			11434	A11434ND
761	12V	150A	CW	S6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0670	421000-0670		11449	A11449ND

762	12V	140A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-200, 104210-2000			11508	A11508ND
763	12V	100A	CW	SD4	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2630	27060-36050		11519	A11519ND
764	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-1270	104210-1270		11527	A11527ND
765	12V	220A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6270			11532	A11532ND
766	12V	55A	CW	V1	IR/EF	ALTERNATOR		DENSO	101211-2590	101211-2590		11559	A11559ND
767	12V	160A	CW	SC6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0770	421000-0770		11570	A11570ND
768	12V	85A			IR/IF	ALTERNATOR		DENSO	1042109010			11571	A11571ND
769	12V	160A	CW	SD6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0750	421000-0750		11572	A11572ND
770	12V	130A	CW	SD6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-1240			11573	A11573ND
771	12V	160A	CW	SC6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0513, TM421000-0512			11583	A11583ND
772	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-0680			11591	A11591ND
773	12V	180A	CW	SC6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-7040, 421000-7041	MX421000-7041		11598	A11598ND
774	12V	105A	CW	S5	IR/IF	ALTERNATOR		DENSO	101210-1650			11599	A11599ND
775	12V	120A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-1530			11604	A11604ND
776	12V	157A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2930			11622	A11622ND
777	12V	200A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6670			11624	A11624ND
778	12V	200A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6220			11627	A11627ND
779	12V	150A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-292	104210-2920		11628	A11628ND
780	12V	225A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6601			11629	A11629ND
781	12V	90A		V2	IR/IF	ALTERNATOR		DENSO	102211-9010			11633	A11633ND
782	12V	75A		V1	IR/IF	ALTERNATOR		DENSO	102211-6060			11634	A11634ND
783	12V	150A	CW	SD6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2330			11636	A11636ND
784	12V	200A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104211-0190			11641	A11641ND
785	12V	155A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104211-0100, 104211-0161			11647	A11647ND
786	12V	200A	CW	SC4	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6571			11664	A11664ND
787	12V	175A	CW	SD4	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6561			11665	A11665ND
788	12V	200A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6660			11679	A11679ND
789	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2870			11686	A11686ND
790	12V	150A	CW	SD7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104211-8810			11767	A11767ND
791	12V	125A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104211-3301, 104211-3303			11776	A11776ND
792	12V	125A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2330, 104210-1051			11777	A11777ND
793	12V	150A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3950			11786	A11786ND
794	12V	150A	CW	SC8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3950			11993	A11993ND
795	12V	120A	CW	V2	IR/IF	ALTERNATOR		DENSO	100211-6030	100211-6031		12066	A12066ND
796	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4701			12080	A12080ND
797	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-2470, 101211-2471			12081	A12081ND
798	12V	40A	CW		IR/IF	ALTERNATOR		DENSO	100211-1670	9760218-167		12179	A12179ND
799	12V	45A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-1660	1-2119-11ND		12180	A12180ND
800	12V	40A			IR/IF	ALTERNATOR		DENSO	100211-4000	100211-4001		12182	A12182ND
801	12V	55A		V1	IR/IF	ALTERNATOR		DENSO	100211-6930	1-2439-01ND		12184	A12184ND
802	12V	35A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4540	1-2132-01ND		12187	A12187ND
803	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4531	100211-4530		12188	A12188ND
804	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-1610	9760211-163		12189	A12189ND
805	12V	30A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4520	1-2336-01ND		12190	A12190ND
806	12V	90A	CW	V2	IR/IF	ALTERNATOR		DENSO	101211-9010	9761219-901		12192	A12192ND

807	12V	90A		S8	IR/IF	ALTERNATOR		DENSO	101211-5030			12193	A12193ND
808	12V	120A	CW	S8	IR/IF	ALTERNATOR		DENSO	101211-7130	9761219-713		12194	A12194ND
809	12V	140A	CW	S8	IR/IF	ALTERNATOR		DENSO	100211-6420	ALT30012		12195	A12195ND
810	12V	45A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-0600, 100211-6901			12196	A12196ND
811	12V	35A	CW	V1	IR	ALTERNATOR		DENSO	100211-4490			12197	A12197ND
812	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4640	1-2477-01ND		12198	A12198ND
813	12V	40A		V1	IR/IF	ALTERNATOR		DENSO	100211-4650			12199	A12199ND
814	12V	45A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-0600, 100211-6901			12200	A12200ND
815	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4730			12202	A12202ND
816	12V	45A	CW	V2	IR/IF	ALTERNATOR		DENSO	100211-6780			12204	A12204ND
817	12V	30A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-4610			12206	A12206ND
818	24V	20A		V1	IR/IF	ALTERNATOR		DENSO	100211-4100, 100211-4400,			12210	A12210ND
819	12V	40A		V1	IR/IF	ALTERNATOR		DENSO	100211-4400, 100211-4400,			12270	A12270ND
820	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-1100			12337	A12337ND
821	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-1360			12338	A12338ND
822	12V	55A	CW	V2	IR/IF	ALTERNATOR		DENSO	101211-2240, 101211-2210			12346	A12346ND
823	12V	60A	CW		IR/IF	ALTERNATOR	MARINE	DENSO	101211-3460			12347	A12347ND
824	12V	40A			IR/IF	ALTERNATOR	AGRICULTURE	DENSO	101211-1130, 101211-1131	RE72916,		12353	A12353ND
825	12V	80A	CW	V2	IR/IF	ALTERNATOR	MARINE	DENSO	101211-9940			12355	A12355ND
826	12V	40A	CW	V1	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	101211-1170			12356	A12356ND
827	12V	50A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-8580	AND0563	QAND0563	12357	A12357ND
828	12V	50A	CW	V1	IR/IF	ALTERNATOR	MARINE	DENSO	101211-3020, 101211-3021			12358	A12358ND
829	12V	50A	CW	S4	IR/IF	ALTERNATOR	MARINE	DENSO	101211-3380			12359	A12359ND
830	12V	55A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-2770	1-3424-01ND		12470	A12470ND
831	12V	90A	CW	S8	IR/IF	ALTERNATOR		DENSO	102211-1180	1-3307-01ND		12474	A12474ND
832	12V	50A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-3680	101211-3580		12476	A12476ND
833	12V	40A		V1	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	100211-4020, 100211-4621	27060-87212,		12530	A12530ND
834	12V	40A		V1	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	101211-1320	000		12531	A12531ND
835	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-2040			12650	A12650ND
836	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-8810			12651	A12651ND
837	12V	35A		V1	IR/IF	ALTERNATOR		DENSO	101211-1240, 101211-1242			12653	A12653ND
838	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-2850			12656	A12656ND
839	12V	60A	CW	S8	IR/IF	ALTERNATOR		DENSO	102211-0400	1-3309-01ND		12657	A12657ND
840	12V	140A	CW	S8	IR/IF	ALTERNATOR		DENSO	101211-7780	1-3308-01ND		12658	A12658ND
841	12V	150A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3921	104210-3920		12660	A12660ND
842	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-2941			12771	A12771ND
843	12V	40A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-1380			12772	A12772ND
844	12V	90A	CW	S8	IR/IF	ALTERNATOR		DENSO	102211-9090			12776	A12776ND
845	12V	90A	CCW	V1	IR/IF	ALTERNATOR		DENSO	101211-0090, 102211-4380,			12777	A12777ND
846	12V	60A	CW	V2	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	102211-5061			12778	A12778ND
847	12V	40A	CW	V1	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	101211-1030			12807	A12807ND
848	12V	40A	CW		IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	100211-9230			12855	A12855ND
849	12V	110A	CW	V2	IR/IF	ALTERNATOR	INDUSTRIAL	DENSO	102211-3030			12875	A12875ND
850	12V	175A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6540			12884	A12884ND
851	12V	160A	CW	SC6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0620, 421000-0821			12886	A12886ND

852	12V	180A	CW	SC6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-7090			12887	A12887ND
853	12V	90A	CW	S4	ER/IF	ALTERNATOR		DENSO	121000-3300	1-1490-00ND		13184	A13184ND
854	12V	90A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-3360	1-1531-01ND		13185	A13185ND
855	12V	55A	CW	S3	IR/IF	ALTERNATOR		DENSO	100211-6720	1-1230-01ND		13214	A13214ND
856	12V	90A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-2680	1-1506-01ND		13220	A13220ND
857	12V	70A			IR/IF	ALTERNATOR		DENSO	100211-330	1-1022-01ND		13229	A13229ND
858	12V	60A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-3352	1-1053-01ND		13240	A13240ND
859	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-343	1-1075-01ND		13241	A13241ND
860	12V	90A	CW	S4	ER/IF	ALTERNATOR		DENSO	121000-3380	1-1503-02ND		13245	A13245ND
861	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8230	1-1041-01ND		13252	A13252ND
862	12V	55A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-1570	1-1230-02ND		13255	A13255ND
863	12V	90A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-2660	1-1490-00ND		13256	A13256ND
864	12V	70A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-839	1-1421-01ND		13276	A13276ND
865	12V	70A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-3320	1-1028-01ND		13277	A13277ND
866	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8050	1-1063-01ND		13278	A13278ND
867	12V	120A	CW	S4	ER/IF	ALTERNATOR		DENSO	121000-4000	9712109-400		13280	A13280ND
868	12V	70A	CCW	S5	IR/IF	ALTERNATOR		DENSO	100211-3310	1-1023-01ND		13294	A13294ND
869	12V	120A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-4040	1-1504-01ND		13301	A13301ND
870	12V	120A	CW	S8	ER/IF	ALTERNATOR		DENSO	121000-4150	0128		13302	A13302ND
871	12V	120A	CW	S8	ER/IF	ALTERNATOR		DENSO	121000-4090	210-0139		13304	A13304ND
872	12V	90A	CW	S5	ER/IF	ALTERNATOR		DENSO	121000-3000	210-0136		13305	A13305ND
873	12V	90A	CW	S5	ER/IF	ALTERNATOR		DENSO	121000-3390	9712109-339		13306	A13306ND
874	12V	90A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3400	1-1503-04ND		13307	A13307ND
875	12V	120A	CW	S5	ER/IF	ALTERNATOR		DENSO	121000-4010	210-0134		13308	A13308ND
876	12V	120A	CW	S4	ER/IF	ALTERNATOR		DENSO	121000-4050	0122		13309	A13309ND
877	12V	120A	CW	S5	ER/IF	ALTERNATOR		DENSO	121000-4060	1-1504-00ND		13310	A13310ND
878	12V	120A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4070	1-1504-04ND		13311	A13311ND
879	12V	90A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-3370	1-1503-01ND		13312	A13312ND
880	12V	120A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-4030	9712109-403		13313	A13313ND
881	12V	50A	CW	S3	IR/IF	ALTERNATOR		DENSO	100211-6600	210-0407		13316	A13316ND
882	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-7100	1-1055-01ND		13319	A13319ND
883	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8320	1-1043-01ND		13321	A13321ND
884	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-7050	1-1039-01ND		13322	A13322ND
885	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8030	1-1039-02ND		13323	A13323ND
886	12V	80A	CCW	S5	IR/IF	ALTERNATOR		DENSO	100211-815	1-1011-01ND		13325	A13325ND
887	12V	65A	CCW	S4	IR/IF	ALTERNATOR		DENSO	100211-7320	1-1002-01ND		13326	A13326ND
888	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-8300	1-1029-01ND		13331	A13331ND
889	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-7180	1-1076-01ND		13339	A13339ND
890	12V	90A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3450	1-1511-01ND		13341	A13341ND
891	12V	75A	CW	V2	ER/IF	ALTERNATOR		DENSO	121000-3370	121000-3430		13353	A13353ND
892	12V	90A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-3470	1-1503-05ND		13354	A13354ND
893	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-606	1-1092-01ND		13384	A13384ND
894	12V	100A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-611	1-1420-01ND		13385	A13385ND
895	12V	110A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-6170	1-1410-01ND		13387	A13387ND
896	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-641	1-1605-01ND		13389	A13389ND

897	12V	75A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-7950	1-1436-01ND		13391	A13391ND
898	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-8060	1-1419-01ND		13393	A13393ND
899	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-8540	1-1588-01ND		13394	A13394ND
900	12V	100A	CCW	S4	IR/IF	ALTERNATOR		DENSO	100211-855	1-1726-01ND		13395	A13395ND
901	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-8570	1-1965-01ND		13396	A13396ND
902	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-9780	1-1964-01ND		13397	A13397ND
903	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-9840	1-1966-01ND		13398	A13398ND
904	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8560	1-1857-01ND		13407	A13407ND
905	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-8640	1-1973-01ND		13408	A13408ND
906	12V	70A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-0200	1-1935-01ND		13409	A13409ND
907	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-630	1-1591-01ND		13410	A13410ND
908	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-9890	1-1884-01ND		13411	A13411ND
909	12V	70A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-8860	1-1837-01ND		13413	A13413ND
910	12V	75A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-7990	1-1436-02ND		13423	A13423ND
911	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-853	1-1882-01ND		13424	A13424ND
912	12V	65A	CCW	S4	IR/IF	ALTERNATOR		DENSO	100211-891	1-1963-01ND		13433	A13433ND
913	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8810	1-1860-01ND		13440	A13440ND
914	12V	80A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3440	1511-01ND-2		13442	A13442ND
915	12V	90A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3480	1-1592-01ND		13443	A13443ND
916	12V	120A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-4130	1-1504-06ND, 1-		13453	A13453ND
917	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-8870	1-1836-01ND		13454	A13454ND
918	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-7820	1-1418-01ND		13455	A13455ND
919	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-9710	1-1166-02ND		13456	A13456ND
920	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-5970	1-1978-01ND		13457	A13457ND
921	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-0060	1-1763-01ND		13482	A13482ND
922	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-2130			13485	A13485ND
923	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0340	1-1839-01ND		13486	A13486ND
924	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-5150	1-1936-01ND		13487	A13487ND
925	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-5160	1-1977-01ND		13489	A13489ND
926	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	101211-0190	1-1892-01ND		13492	A13492ND
927	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5110	1-1856-01ND		13495	A13495ND
928	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0130	1-1863-01ND		13496	A13496ND
929	12V	80A	CW	V2	IR/IF	ALTERNATOR		DENSO	101211-5270	210-0181		13497	A13497ND
930	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-8820	1-1861-01ND		13498	A13498ND
931	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-0070	1-1838-01ND		13499	A13499ND
932	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0420	1-1979-01ND		13500	A13500ND
933	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-5460	1-1980-01ND		13501	A13501ND
934	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-7060	1-1981-01ND		13502	A13502ND
935	12V	95A	CCW	S6	IR/IF	ALTERNATOR		DENSO	100211-8740	1-1970-01ND		13506	A13506ND
936	12V	90A	CCW	S5	IR/IF	ALTERNATOR		DENSO	100211-819	1-1854-01ND		13507	A13507ND
937	12V	55A	CCW	S3	IR/IF	ALTERNATOR		DENSO	100211-3690	1-1001-01ND		13508	A13508ND
938	12V	70A	CCW	S4	IR/IF	ALTERNATOR		DENSO	100211-977	1-1831-01ND		13509	A13509ND
939	12V	60A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-0530	1-1930-01ND		13512	A13512ND
940	12V	75A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-9730	1-1883-01ND		13521	A13521ND
941	12V	120A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-6310	1-1889-01ND		13524	A13524ND

942	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-6360	1-1835-01ND		13525	A13525ND
943	12V	90A	CCW	S4	IR/IF	ALTERNATOR		DENSO	101211-5410	1-1933-01ND		13529	A13529ND
944	12V	70A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5720	1-1931-01ND		13537	A13537ND
945	12V	90A	CCW	S6	IR/IF	ALTERNATOR		DENSO	101211-5490	1-1854-02ND		13538	A13538ND
946	12V	80A	CCW	S6	IR/IF	ALTERNATOR		DENSO	101211-5500	1-1011-02ND		13539	A13539ND
947	12V	80A	CCW	S4	IR/IF	ALTERNATOR		DENSO	101211-5690	210-0207		13540	A13540ND
948	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5560	1-1975-01ND		13545	A13545ND
949	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5610	1-1976-01ND		13546	A13546ND
950	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-702	1-1934-01ND		13547	A13547ND
951	12V	70A			IR/IF	ALTERNATOR		DENSO	101211-0060	101211-0120		13550	A13550ND
952	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-899	1-1982-01ND		13551	A13551ND
953	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5450	1-1864-01ND		13552	A13552ND
954	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	100211-6390	1-1866-01ND		13553	A13553ND
955	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-5090	1-1984-01ND		13556	A13556ND
956	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-5010	1-1983-01ND		13557	A13557ND
957	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5620	1-1843-01ND		13558	A13558ND
958	12V	90A	CW	V2	IR/IF	ALTERNATOR		DENSO	100211-6130	1-1417-01ND		13562	A13562ND
959	12V	75A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0160	1-1436-01ND		13569	A13569ND
960	12V	90A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3510	1-1972-01ND		13578	A13578ND
961	12V	125A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4211	1-2007-01ND		13592	A13592ND
962	12V	90A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3520	1-2073-01ND		13593	A13593ND
963	12V	120A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4330	1-2075-01ND		13594	A13594ND
964	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0740	1-2081-01ND		13659	A13659ND
965	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-718	1-2145-01ND		13668	A13668ND
966	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-9150	1-2146-01ND		13669	A13669ND
967	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0730	1-2052-01ND		13670	A13670ND
968	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-4132	1-2182-01ND		13671	A13671ND
969	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-4120	1-2051-01ND		13673	A13673ND
970	12V	80A	CCW	S4	IR/IF	ALTERNATOR		DENSO	101211-9250	1-2022-01ND		13674	A13674ND
971	12V	110A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-723	1-2054-01ND		13675	A13675ND
972	12V	90A	CCW	S4	IR/IF	ALTERNATOR		DENSO	101211-9310	1-2055-01ND		13677	A13677ND
973	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-0720	1-2157-01ND		13679	A13679ND
974	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-0550	1-2148-02ND		13680	A13680ND
975	12V	110A	CCW	S5	IR/IF	ALTERNATOR		DENSO	101211-914	1-2082-01ND		13684	A13684ND
976	12V	110A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-722	1-2084-01ND		13685	A13685ND
977	12V	110A	CW	S7	IR/IF	ALTERNATOR		DENSO	101211-709	1-2140-01ND		13687	A13687ND
978	12V	110A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-707	1-2085-01ND		13688	A13688ND
979	12V	120A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-6320	1-2259-01ND		13690	A13690ND
980	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-8980	1-2133-01ND		13705	A13705ND
981	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7520	1-2181-01ND		13706	A13706ND
982	12V	60A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-5090	1-2211-01ND		13711	A13711ND
983	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7300	1-2230-01ND		13715	A13715ND
984	12V	90A	CCW	S6	IR/IF	ALTERNATOR		DENSO	101211-9760	1-2083-01ND		13722	A13722ND
985	12V	70A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-5710	1-2050-01ND		13732	A13732ND
986	12V	90A	CCW	S5	IR/IF	ALTERNATOR		DENSO	101211-9860	1-2142-01ND		13737	A13737ND

987	12V	110A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-727	1-2121-01ND		13738	A13738ND
988	12V	75A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-4220	1-2120-01ND		13739	A13739ND
989	12V	125A			ER/IF	ALTERNATOR		DENSO	121000-426	1-2056-01ND		13741	A13741ND
990	12V	136A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-4170	1-2087-01ND		13742	A13742ND
991	12V	90A	CCW	S4	IR/IF	ALTERNATOR		DENSO	101211-9810	1-2122-01ND		13743	A13743ND
992	12V	120A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4120	1-2074-01ND		13746	A13746ND
993	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-978	1-2138-01ND		13747	A13747ND
994	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-9710	1-2144-01ND		13748	A13748ND
995	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-5020	1-2148-01ND		13753	A13753ND
996	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-9510	1-2080-01ND		13754	A13754ND
997	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-9600	1-2086-01ND		13755	A13755ND
998	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-9960	1-2167-01ND		13756	A13756ND
999	12V	120A	CW	S7	IR/IF	ALTERNATOR		DENSO	101211-7630	1-2143-01ND		13758	A13758ND
1000	12V	90A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-7240	1-2139-01ND		13759	A13759ND
1001	12V	120A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4231	1-2188-01ND		13763	A13763ND
1002	12V	130A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4330	1-2228-01ND		13765	A13765ND
1003	12V	136A	CW	S8	ER/IF	ALTERNATOR		DENSO	121000-4280	1-2227-01ND		13766	A13766ND
1004	12V	80A	CCW	S6	IR/IF	ALTERNATOR		DENSO	102211-1010	1-2189-01ND		13767	A13767ND
1005	12V	80A	CCW	S6	IR/IF	ALTERNATOR		DENSO	210-0192	102211-1010		13768	A13768ND
1006	12V	130A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7850	101211-7851		13769	A13769ND
1007	12V	95A	CCW	S6	IR/IF	ALTERNATOR		DENSO	102211-1020	102211-1021		13776	A13776ND
1008	12V	136A	CW	S6	ED/IF	ALTERNATOR		DENSO	121000-4250	1-2286-01ND		13790	A13790ND
1009	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7800	1-1934-02ND		13791	A13791ND
1010	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	101211-9590	1-2238-01ND		13794	A13794ND
1011	12V	80A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-1430	1-2229-01ND		13795	A13795ND
1012	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-1370	102211-1370		13796	A13796ND
1013	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7670	1-2190-01ND		13806	A13806ND
1014	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-373	1-2381-01ND		13809	A13809ND
1015	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-361	1-2224-01ND		13822	A13822ND
1016	12V	117A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-363	1-2225-01ND		13823	A13823ND
1017	12V	136A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-4290	1-2227-02ND		13824	A13824ND
1018	12V	81A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3610	1-2285-01ND		13834	A13834ND
1019	12V	105A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-0680	1-2374-01ND		13835	A13835ND
1020	12V	120A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-0691	1-2375-01ND		13836	A13836ND
1021	12V	75A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-5140	1-2443-01ND		13837	A13837ND
1022	12V	136A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-4270	211-0134		13842	A13842ND
1023	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-784	1-2277-01ND		13844	A13844ND
1024	12V	120A	CCW	SC6	IR/IF	ALTERNATOR		DENSO	102211-0500	102211-0500		13845	A13845ND
1025	12V	95A	CCW	S4	IR/IF	ALTERNATOR		DENSO	102211-1260	9762219-126		13847	A13847ND
1026	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-1960	1-2359-01ND		13857	A13857ND
1027	12V	70A			IR/IF	ALTERNATOR		DENSO	102211-5130	1-2323-01ND		13858	A13858ND
1028	12V	100A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	102211-0610	1-2276-01ND		13859	A13859ND
1029	12V	136A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0030			13867	A13867ND
1030	12V	120A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	121000-2520	01ND,421000-		13868	A13868ND
1031	12V	81A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	121000-3730	1-2380-01ND		13869	A13869ND

1032	12V	160A	CW	SD6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0021	0021,22,23,24,25		13870	A13870ND
1033	12V	140A	CW	SC6	ER/IF	ALTERNATOR		DENSO	0011,0012,0222,0			13871	A13871ND
1034	12V	136A	CW	S6	ED/IF	ALTERNATOR		DENSO	121000-4440	1-2497-01ND		13873	A13873ND
1035	12V	136A	CW	S8	ER/IF	ALTERNATOR		DENSO	121000-4481	1-2389-01ND		13874	A13874ND
1036	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-1740			13875	A13875ND
1037	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3820			13876	A13876ND
1038	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3800			13877	A13877ND
1039	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-1900	1-2372-01ND	440868, 443110	13878	A13878ND
1040	12V	80A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-2000	1-2367-01ND		13879	A13879ND
1041	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3650	1-2364-01ND		13880	A13880ND
1042	12V	80A	CW	S5	IR/IF	ALTERNATOR		DENSO	101211-9630	1-2366-01ND		13885	A13885ND
1043	12V	105A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-1760	102211-1770		13894	A13894ND
1044	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-5260	1-2368-01ND	443173	13896	A13896ND
1045	12V	136A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	121000-4460	121000-4460		13899	A13899ND
1046	12V	130A	CW	S6	IR/IF	ALTERNATOR		DENSO	104210-3120			13905	A13905ND
1047	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3780	1-2388-02ND		13906	A13906ND
1048	12V	81A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3810	210-0474		13907	A13907ND
1049	12V	120A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-0520	1-2425-01ND		13909	A13909ND
1050	12V	117A	CW	S7	ER/IF	ALTERNATOR		DENSO	121000-376	1-2388-01ND		13910	A13910ND
1051	12V	136A	CW	S7	ER/IF	ALTERNATOR	HAIRPIN	DENSO	121000-4450	1-2390-01ND		13911	A13911ND
1052	12V	136A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0100	1-2441-01ND		13912	A13912ND
1053	12V	160A	CW	S6	ER/IF	ALTERNATOR	HAIRPIN	DENSO	0040,42,43			13913	A13913ND
1054	12V	136A	CW	S7	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0111			13914	A13914ND
1055	12V	160A	CW	S7	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-0051			13915	A13915ND
1056	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3090	3090,3091,3092		13918	A13918ND
1057	12V	140A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3060	1-2407-01ND		13919	A13919ND
1058	12V	130A	CW	S6	ER/IF	ALTERNATOR		DENSO	421000-0120	421000-0121		13923	A13923ND
1059	12V	120A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-0860	XR8-22418		13925	A13925ND
1060	12V	100A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	102211-0870			13926	A13926ND
1061	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3042	104210-3042		13927	A13927ND
1062	12V	100A	CW	S6	IR/IF	ALTERNATOR		DENSO	101211-7450			13956	A13956ND
1063	12V	90A	CW	S7	IR/IF	ALTERNATOR		DENSO	102211-2120	210-0459		13957	A13957ND
1064	12V	80A	CW	S7	IR/IF	ALTERNATOR		DENSO	102211-2480			13958	A13958ND
1065	12V	100A	CW	S7	IR/IF	ALTERNATOR		DENSO	101211-7400			13959	A13959ND
1066	12V	117A	CW	SC6	ED/IF	ALTERNATOR		DENSO	121000-3851	121000-3850		13960	A13960ND
1067	12V	136A	CW	SC6	ER/IF	ALTERNATOR		DENSO	121000-4320, 121000-4521			13961	A13961ND
1068	12V	100A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	102211-0770	9662219-077		13962	A13962ND
1069	12V	130A	CW	S7	IR/IF	ALTERNATOR		DENSO	104210-3141,	104210-3140		13963	A13963ND
1070	12V	136A	CW	SC6	ER/IF	ALTERNATOR		DENSO	121000-4372, 121000-4373			13964	A13964ND
1071	12V	95A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	102211-2680	210-0507		13965	A13965ND
1072	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4150,	104210-3201		13978	A13978ND
1073	12V	140A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3082	104210-3081		13979	A13979ND
1074	12V	105A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	3290,91,92,93	1-2953-01ND		13980	A13980ND
1075	12V	150A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3450	1-2596-01ND		13981	A13981ND
1076	12V	95A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-2400			13982	A13982ND

1077	12V	130A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3440	1-2597-01ND		13983	A13983ND
1078	12V	130A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3470			13984	A13984ND
1079	12V	160A	CW	S7	IR/IF	ALTERNATOR		DENSO	421000-0280			13988	A13988ND
1080	12V	100A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	102211-0760	1-2769-01ND		13991	A13991ND
1081	12V	130A	CW	S6	IR/IF	ALTERNATOR		DENSO	104210-3031	1-2941-01ND		13992	A13992ND
1082	12V	117A	CW	S6	ER/IF	ALTERNATOR		DENSO	121000-3750	210-0472		13999	A13999ND
1083	12V	220A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6850			14019	A14019ND
1084	12V	220A	CW	S6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-6860			14020	A14020ND
1085	12V	220A	CW	SC6	ED/IF	ALTERNATOR	HAIRPIN	DENSO	421000-7130	400-52505R		14027	A14027ND
1086	12V	70A	CW	S5	IR/IF	ALTERNATOR		DENSO	100211-3040	100211-3041		14611	A14611ND
1087	12V	60A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-2030	1-1036-01ND		14668	A14668ND
1088	12V	60A	CW	S5	IR/IF	ALTERNATOR		DENSO	10463757	10463759		14679	A14679ND
1089	12V	55A	CW	V1	IR/IF	ALTERNATOR		DENSO	100211-1550	100211-1551		14684	A14684ND
1090	12V	65A			IR/IF	ALTERNATOR		DENSO	100211-1230	1-1237-01ND		14732	A14732ND
1091	12V	45A	CW	S4	IR/IF	ALTERNATOR		DENSO	100211-6860	210-0337		14843	A14843ND
1092	12V	65A	CCW	S5	IR/IF	ALTERNATOR		DENSO	100211-2150	1-1007-02ND		14855	A14855ND
1093	12V	55A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	100211-4150	1-1519-01ND		14937	A14937ND
1094	12V	105A	CW	S6	IR/IF	ALTERNATOR		DENSO	101210-1271			20097	A20097ND
1095	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-8690	CA2094IR	443131	20098	A20098ND
1096	12V	105A			IR/IF	ALTERNATOR		DENSO	102211-8681	CA2096IR		20144	A20144ND
1097	12V	150A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2740	DENDAN933	443103	20215	A20215ND
1098	12V	130A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4770		443091	20226	A20226ND
1099	12V	100A			IR/IF	ALTERNATOR		DENSO	CA2090IR, 101210-1100, 101210-1100-2025Z	440860, 443165		20357	A20357ND
1100	12V	150A	CW	S8	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4010			20358	A20358ND
1101	12V	100A	CW	SC6	IR/IF	ALTERNATOR		DENSO	101210-1091	CA2049IR	443162	20361	A20361ND
1102	12V	100A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5350	104210-5290	440863, 443151	20395	A20395ND
1103	12V	120A	CW	S5	IR/IF	ALTERNATOR		DENSO	101210-1470	CA2070IR		20396	A20396ND
1104	12V	130A	CW	S7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5370			20419	A20419ND
1105	12V	150A	CW	S6	IR/IF	ALTERNATOR		DENSO	104210-4650			20425	A20425ND
1106	12V	120A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	CA1902IR, 104210-1022-1025Z, 1022-2040Z	443075, 440853	443075	20492	A20492ND
1107	12V	100A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2530	CA2097IR		20538	A20538ND
1108	12V	120A			IR/IF	ALTERNATOR		DENSO	102211-1680	JA1710IR		21369	A21369ND
1109	12V	90A			IR/IF	ALTERNATOR		DENSO	102211-1431	JA1517		21472	A21472ND
1110	12V	90A			IR	ALTERNATOR		DENSO	102211-1650	JA1608IR		21551	A21551ND
1111	12V	55A			ER/EF	ALTERNATOR		DENSO	100210-3450	JA193		22070	A22070ND
1112	12V	55A			ER/EF	ALTERNATOR		DENSO	102211-3060	JA777		22096	A22096ND
1113	12V	80A	CW		IR/IF	ALTERNATOR		DENSO	102211-8061	98AB-10300-HE		22141	A22141ND
1114	12V	130A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4281			22321	A22321ND
1115	12V	80A			IR	ALTERNATOR		DENSO	101211-5260	JA1534IR		22598	A22598ND
1116	12V	70A						DENSO	102211-5360			22984	A22984ND
1117	12V	85A			IR/IF	ALTERNATOR		DENSO	101211-9180	JA1356IR		23037	A23037ND
1118	12V	80A			IR	ALTERNATOR		DENSO	101211-5630	102211-1060		23054	A23054ND
1119	12V	120A	CW	V1	IR/IF	ALTERNATOR		DENSO	102211-0670			23089	A23089ND
1120	12V	150A	CW		IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3170	104210-3240		23229	A23229ND
1121	12V	75A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-2600	JA1803IR	443074	23270	A23270ND

1122	12V	70A			IR/IF	ALTERNATOR		DENSO	JA1809IR	443039(102211-5200=23276)	443039	23276	A23276ND
1123	12V	90A			IR/IF	ALTERNATOR		DENSO	102211-8010, JA1800IR		443163	23277	A23277ND
1124	12V	105A	CW	S6	IR/IF	ALTERNATOR		DENSO	102211-2220, 440605(102211-102211-2221-2222=23287)		440865	23297	A23297ND
1125	12V	130A	CW	SC5	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3051			23298	A23298ND
1126	12V	130A			IR/IF	ALTERNATOR	HAIRPIN	DENSO		104210-3431		23316	A23316ND
1127	12V	120A			IR/IF	ALTERNATOR		DENSO	101211-7870, 101211-7871	JA1724IR		23352	A23352ND
1128	12V	75A			IR/IF	ALTERNATOR		DENSO	102211-8430	CA1766IR		23545	A23545ND
1129	12V	70A			IR	ALTERNATOR		DENSO	100213-1730, 100213-1770	JA1367IR		23710	A23710ND
1130	12V	90A	CW	S5	IR/IF	ALTERNATOR		DENSO	102211-8470	CA1742IR		23800	A23800ND
1131	12V	130A	CW	SC6	IR/IF	ALTERNATOR		DENSO	102211-8660	CA1890IR		23808	A23808ND
1132	12V	120A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3511	104210-3513	443038	23820	A23820ND
1133	12V	150A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-2710	104210-3520	443071	23821	A23821ND
1134	12V	80A			IR/IF	ALTERNATOR		DENSO	102211-8570	CA1665IR		23823	A23823ND
1135	12V	120A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-5790			23839	A23839ND
1136	12V	115A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4101, 104210-4102	CA1964IR	443077	23843	A23843ND
1137	12V	120A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	4M5T10300KB	104210-3030, CA1041IR		23912	A23912ND
1138	12V	100A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-3730			23941	A23941ND
1139	12V	100A	CW	SC7	IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4520		443111	23947	A23947ND
1140	12V	70A			IR/IF	ALTERNATOR		DENSO	102211-8730	CA1978IR		23965	A23965ND
1141	12V	80A			IR/IF	ALTERNATOR		DENSO	102211-8740	CA1949IR		23966	A23966ND
1142	12V	130A	CW	SC7	IR	ALTERNATOR	HAIRPIN	DENSO	104210-3911	104210-4860		23971	A23971ND
1143	12V	130A	CW	SC7	IR	ALTERNATOR	HAIRPIN	DENSO	104210-4980			23996	A23996ND
1144	12V	130A		S6	IR/IF	ALTERNATOR		DENSO	101210-0100, 102211-8351	CA1952IR		24006	A24006ND
1145	12V	105A			IR/IF	ALTERNATOR		DENSO	102211-8351, 102211-8352	CA1925IR		24013	A24013ND
1146	12V	120A	CW	S6	IR	ALTERNATOR	HAIRPIN	DENSO	102211-8740, 104210-2521	443199(104210-2521=24046)	443199	24046	A24046ND
1147	12V	130A			IR/IF	ALTERNATOR	HAIRPIN	DENSO		104210-3410		24056	A24056ND
1148	12V	70A	CW	S4	IR/IF	ALTERNATOR		DENSO	102211-8310	CA1886IR	443033	24062	A24062ND
1149	12V	70A	CW	SD6	IR	ALTERNATOR		DENSO	101210-0930, 101210-0051	CA1955IR	443084	24063	A24063ND
1150	12V	105A		SC6	IR	ALTERNATOR		DENSO	101210-0960	CA1956IR	443072	24064	A24064ND
1151	12V	120A	CW	SC6	IR	ALTERNATOR		DENSO	101210-0970	CA1987IR	443048	24065	A24065ND
1152	12V	120A	CW	SC6	IR	ALTERNATOR		DENSO	102211-8630	CA1935IR	443050	24068	A24068ND
1153	12V	150A	CW	S6	HAIRPIN	ALTERNATOR		DENSO	104210-2870	A-80552		11591=11686	A11591ND
1154	12V	40A	CW	V1	IR	ALTERNATOR		DENSO	100211-1660	1-2119-11NDSE		12180-SE	A12180ND-SE
1155	12V	90A				ALTERNATOR		DENSO		WP12-AL257			
1156	12V	130A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4601				104210-4601
1157	12V	130A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104210-4611				104210-4611
1158	12V	30A				ALTERNATOR		DENSO	JA984IR				
1159								DENSO	104210-4601	27060-75370			
1160								DENSO	104210-4611	27060-75350			
1161	12V	150A			IR/IF	ALTERNATOR	HAIRPIN	DENSO	104211-8900	400-52512R			
1162	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	27060-23020	102211-1670	440866		440866
1163	12V	90A	CW	S4	IR/IF	ALTERNATOR		DENSO	101210-1480	CA2059IR	443198		A23828ND
1164	12V	90A	CW	S6	IR/IF	ALTERNATOR		DENSO	101210-0890	JA1894IR	443082		A23870ND
1165	12V	120A	CW	S5	IR/IF	ALTERNATOR		DENSO	101210-1380	CA2070IR	443130		A20673ND
1166	12V	80A	CW	SC7	IR/IF	ALTERNATOR		DENSO	102211-2310	JA1796IR	443083		A23313ND

1167	12V	120A	CW	SC6	IR/IF	ALTERNATOR		DENSO	101210-1870	CA1698IR	443088		A20539ND
1168	12V	40-61A	CW	VARIOUS	ER/EF	ALTERNATOR	1G	FORD	C6TF-10346-A	1-1926-00FD		7058	A7058FD
1169	12V	40-65A	CW	VARIOUS	ER/EF	ALTERNATOR	1G	FORD	D5AF-10300-JA	D7AF-10300-JA		7078	A7078FD
1170	12V	75A	BI	V2	ER/EF	ALTERNATOR	1G	FORD	E2HF-10346-AA	E2HF-10346-CA		7711	A7711FD
1171	12V	75A	BI	V2	ER/EF	ALTERNATOR	1G	FORD	87HU-10300-AA	E2HF-10346-BA		7712	A7712FD
1172	12V	100A	CW	VARIOUS	ER/EF	ALTERNATOR	1G	FORD	E8DF-10300-CA	1-1807-00FD		7742	A7742FD
1173	12V	110A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F4DU-10300-DA	1-1765-20FD		7748	A7748FD
1174	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F57U-10300-AA	1-1431-10FD		7750	A7750FD
1175	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F0CF-10300-AA	1-1617-02FD		7751	A7751FD
1176	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F0DF-10300-BA	1-1608-21FD		7752	A7752FD
1177	12V	95A	CW	S7	IR/IF	ALTERNATOR	3G	FORD	F1VU-10300-BB	1-1609-30FD		7753	A7753FD
1178	12V	95A	CW	S5	IR/IF	ALTERNATOR	3G	FORD	F23U-10300-CA	1-1616-01FD		7760	A7760FD
1179	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F3DU-10300-BB	1-1618-21FD		7765	A7765FD
1180	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F4DU-10300-AA	F4OU-CA,		7769	A7769FD
1181	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F3DZ-10346-B	1-1618-20FD		7770	A7770FD
1182	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F4PZ-10346-B	1-1704-30FD		7771	A7771FD
1183	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	F5OU-10300-FA	1-1904-11FD		7773	A7773FD
1184	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	96BB-10300-AB	1-1991-30FD		7775	A7775FD
1185	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F6PZ-10346-B	1-1989-30FD		7776	A7776FD
1186	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F4DU-10300-CA	1-1987-21FD		7777	A7777FD
1187	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	F6DU-10300-BB	1-1993-11FD		7780	A7780FD
1188	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	F6LU-10300-CA	1-1988-11FD		7781	A7781FD
1189	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F3AU-10300-CA	112932		7784	A7784FD
1190	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	F6DU-10300-DB	1-2012-21FD		7786	A7786FD
1191	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	F77U-10300-AB	1-2024-21FD		7787	A7787FD
1192	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XF2U-10300-AB	1-2206-21FD	6=92508	7788	A7788FD
1193	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F6RZ-10346-AA,	94BB-AH		7789	A7789FD
1194	12V	95A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F7UU-10300-AB	1-2030-31FD		7790	A7790FD
1195	12V	130A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F75U-10300-CA	1-1989-32FD		7791	A7791FD
1196	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	97BB-10300-AC	1-2169-11FD-1		7792	A7792FD
1197	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F7CU-10300-CB	1-2049-01FD		7793	A7793FD
1198	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F7PU-10346-JA	1-2160-11FD-1		7794	A7794FD
1199	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	F8AU-10300-AB	1-2158-31FD	3	7795	A7795FD
1200	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	F81U-10300-EB	1-2173-11FD	6	7796	A7796FD
1201	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	F81U-10300-DB	1-2209-11FD	4	7797	A7797FD
1202	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	F81U-10300-CC	1-2172-31FD	2	7798	A7798FD
1203	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	F81U-10300-GA	1-2178-31FD	8	7799	A7799FD
1204	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	98BB-10300-CC	1-2207-01FD	6	8250	A8250FD
1205	12V	130A	CW	S8	IR/IF	ALTERNATOR	4G	FORD	XL3U-10300-AA	1-1988-12FD		8251	A8251FD
1206	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XR3U-10300-AA	1-2264-31FD	0	8252	A8252FD
1207	12V	130A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XF2U-10300-BC	1-2338-11FD	4	8253	A8253FD
1208	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XS8Z-10346-AA	1-2412-11FD		8254	A8254FD
1209	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XR8U-10300-AE	1-2248-31FD		8255	A8255FD
1210	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	XR8U-10300-CE	1-2265-21FD	9=92509	8256	A8256FD
1211	12V	105A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	1-2248-32FD	XW4U-10300-CC		8257	A8257FD

1212	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	1L5U-10300-BA	1L5U-10300-BB		8258	A8258FD
1213	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	1L8U-10300-CD	1-2414-11FD	1	8259	A8259FD
1214	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	98AB-10300-EB	1-2349-01FD	8=92511	8260	A8260FD
1215	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	98AB-10300-FC	1-2350-11FD	5	8261	A8261FD
1216	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	YF1U-10300-DA	1-2348-21FD	3	8263	A8263FD
1217	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	1L8U-10300-AB	1L8U-10300-AC	5	8264	A8264FD
1218	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	1L5U-10300-AC	1L5U-10300-AD	9	8265	A8265FD
1219	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	1R3U-10300-AA	1R3U-10300-AB	7=92523	8266	A8266FD
1220	12V	130A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	XL1U-10300-BB	1-2274-31FD		8267	A8267FD
1221	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	2F1U-10300-DA	1-2421-21FD	1	8268	A8268FD
1222	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	2F1U-10300-BA	2F1Z-10346-BA,		8269	A8269FD
1223	12V	135A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	3L74-10300-AA	3L74-10300-BA	2	8303	A8303FD
1224	12V	105A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	2R3U-10300-BA	2R3V-10300-BA	0	8304	A8304FD
1225	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	2L7U-10300-AA	2L7Z-10346-AA	8	8305	A8305FD
1226	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	3C3T-10300-AA	3C3T-10300-AC	0	8306	A8306FD
1227	12V	135A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	3C3T-10300-BA	3C3T-10300-BB	7=92529	8307	A8307FD
1228	12V	110A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	3C3T-10300-CA	3C3T-10300-CB		8308	A8308FD
1229	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	F8RZ-10346-CC		7	8309	A8309FD
1230	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	3C3T-10300-DA	3C3Z-10346-DA	0	8310	A8310FD
1231	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	2C6U-10300-BA	2C6Z-10346-BA		8311	A8311FD
1232	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	3W1U-10300-AA	3W1U-10300-AB		8313	A8313FD
1233	12V	130A	CW	SC6	IR/IF	ALTERNATOR	4G	FORD	3W3U-10300-AA	1-2538-12FD		8314	A8314FD
1234	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	3W1U-10300-BB	3W1Z-10346-BA		8315	A8315FD
1235	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	2C3U-10300-BB	2C3U-10300-BC	4	8316	A8316FD
1236	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	2C3U-10300-CB	2C3U-10300-CC		8317	A8317FD
1237	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	4L3U-10300-BA	4L3U-10300-BB	2	8318	A8318FD
1238	12V	130A	CW	SC6	IR/IF	ALTERNATOR	4G	FORD	5S4T-10300-DA	5S4T-10300-DC,		8402	A8402FD
1239	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	5L8T-10300-KC	5L8T-10300-KD		8403	A8403FD
1240	12V	130A	CW	SC6	IR/IF	ALTERNATOR	4G	FORD	5L8T-10300-MC	5L8Z-10346-MA		8404	A8404FD
1241	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	1-2671-21FD	5L8T-10300-LA		8405	A8405FD
1242	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	4S4T-10300-AC	4S4Z-10346-AB	1	8406	A8406FD
1243	12V	110A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	4S4T-10300-BC	4S4T-10300-BD	1=92553	8407	A8407FD
1244	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	3F2U-10300-AA	3F2Z-10346-AA	0	8408	A8408FD
1245	12V	110A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	2MSU-10300-AA		1=92554	8418	A8418FD
1246	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	5C3T-10300-AA	5C3T-10300-AC		8429	A8429FD
1247	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	4R3T-10300-AA	4R3T-10300-AB	8	8437	A8437FD
1248	12V	90A			IR/IF	ALTERNATOR	RC28	FORD	1S7T-10300-BA, 1S7Z-10300-BB	CA1638IR		8440	A8440FD
1249	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	5F9T-10300-AC	5F9Z-10346-AA		8442	A8442FD
1250	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	5L7T-10300-CB	5L7Z-10346-CA	2	8443	A8443FD
1251	12V	135A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	5L7T-10300-BB	5L7Z-10346-BA	0=92530	8444	A8444FD
1252	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	5C2T-10300-CA	5C2Z-10346-CA	4	8445	A8445FD
1253	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	4L2T-10300-DB	4L2T-10300-DD		8446	A8446FD
1254	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	5L3T-10300-BA	5L3T-10300-BB	4	8447	A8447FD
1255	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	6L2T-10300-AB	6L2T-10300-AD	3BB1	8448	A8448FD
1256	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	5W1T-10300-AB	5W1Z-10346-AA	8	8472	A8472FD

1257	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	7C2T-10300-AA	7C2Z-10346-AA		8473	A8473FD
1258	12V	130A	CW		IR/IF	ALTERNATOR	4G	FORD	GL-498	AFD0166		8475	A8475FD
1259	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	5C3T-10300-DA			8476	A8476FD
1260	12V	135A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	5C3T-10300-BA	5C3Z-10346-BA	9	8478	A8478FD
1261	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	5C3T-10300-DB		0	8479	A8479FD
1262	12V	130A	CW	S6	IR/IF	ALTERNATOR	4G	FORD	6S4T-10300-CC	1-2929-21FD		8511	A8511FD
1263	12V	120A	CW	SC6	IR/IF	ALTERNATOR	4G	FORD	6S4T-10300-DC	1-2929-22FD		8512	A8512FD
1264	12V	135A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	6R3T-10300-DB	6R3Z-10346-DA	5=92567	8516	A8516FD
1265	12V	135A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	7R3Z-10346-A			8517	A8517FD
1266	12V	110A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	6L5T-10300-AA	6L5Z-10346-AA	3	8518	A8518FD
1267	12V	115A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	5L2T-10300-AA	5L2Z-10346-AA		8519	A8519FD
1268	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	6L5T-10300-BA	1-1613-12FD	1	8520	A8520FD
1269	12V	105A	CW	S6	IR/IF	ALTERNATOR	6G	FORD	6F1T-10300-AA	6F1T-AA	8	8521	A8521FD
1270	12V	120A	CW	S8	IR/IF	ALTERNATOR	4G	FORD	7C3T-10300-CA	1-3386-01FD		8522	A8522FD
1271	12V	80A			IR/IF	ALTERNATOR		FORD	2S6T10300AB	CA1777IR		8528	A8528FD
1272	12V	95A	CW	S5	IR/IF	ALTERNATOR	3G	FORD	93BB-10300-FD	1-2633-01FD		20150	A20150FD
1273	12V	125A			IR/IF	ALTERNATOR	RC28	FORD	157T-10300-CE,1904081-157T	CA1635IR		22150	A22150FD
1274	12V	130A			IR/IF	ALTERNATOR		FORD	2T1U10300CB	CA1857IR-C		23852	A23852FD
1275	12V	130A			IR/IF	ALTERNATOR		FORD	2T1U-10300-AE,			23853	A23853FD
1276	12V	100A	CW	VARIOUS	ER/EF	ALTERNATOR	1G	FORD	D2OZ-10346-B	1-1805-00FD		7072-9	A7072-9FD
1277	12V	90A	CW	V1	ER/EF	ALTERNATOR	1G	FORD	D3VF-10300-AA	1-1806-00FD		7074-9	A7074-9FD
1278	12V	65A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E69F-10300-AA	1-1784-15FD		7088-2	A7088-2FD
1279	12V	65A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E43Z-10346-D	E53F-10300-EA		7088-10	A7088-10FD
1280	12V	100A	CW	S6	ER/EF	ALTERNATOR	1G	FORD	D8VF-10300-BA	E8DZ-10300-B		7705-9	A7705FD-9
1281	12V	100A	CW	S6	ER/EF	ALTERNATOR	1G	FORD	D8VF-10300-BA	1-1806-12FD		7705-12	A7705FD-12
1282	12V	65A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E57F-10300-AA	E67F-10346-AA		7716-2	A7716FD-2
1283	12V	60A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E57F-10300-AA	1-1785-10FD		7716-10	A7716FD-10
1284	12V	75A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E8PF-10346-DA	E8PZ-10346-C		7732-2	A7732FD-2
1285	12V	75A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E6DF-10300-BA	1-1788-10FD		7732-10	A7732FD-10
1286	12V	75A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E79F-10300-BA	1-1789-11FD		7735-2	A7735FD-2
1287	12V	75A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E79F-10300-BA	E7PF-10346-LA		7735-10	A7735FD-10
1288	12V	80A	CW	S5	IR/EF	ALTERNATOR	2G	FORD	E8EF-10300-AB	1-1793-10FD		7744-2	A7744FD-2
1289	12V	80A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E99F-10300-AB	1-1791-10FD		7745-2	A7745FD-2
1290	12V	80A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	20-216-30	20-208-30-1		7745-10	A7745FD-10
1291	12V	80A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	F09F-10300-AA	1-1790-10FD		7746-2	A7746FD
1292	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD			38BB1	7749-3	A7749FD-3
1293	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F0VF-10300-AA	1-1614-31FD		7749-11	A7749FD-11
1294	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2PU-10346-GA	F2UU-10300-EA		7755-3	A7755FD-3
1295	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	E9DF-10300-CA	AB,		7755-11	A7755FD-11
1296	12V	130A	CW	S5	IR/IF	ALTERNATOR	3G	FORD	F1DU-10300-AD	1-1611-20FD		7756-7	A7756FD-7
1297	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F6RZ-10346-AA	1-1990-01FD		7774-3	A7774FD-3
1298	12V	115A	CW	V2	IR/IF	ALTERNATOR	3G	FORD	F3HT-10300-LA	F3HZ-10346-B		7778-3	A7778FD-3
1299	12V	115A	CW	V2	IR/IF	ALTERNATOR	3G	FORD	F5HZ-10346-E,	KA, F6HT-MA		7778-11	A7778FD
1300	12V	95A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F5HT-10300-DA	1-1977-10FD		7785-3	A7785FD-3
1301	12V	110A	CW	S8	IR/IF	ALTERNATOR	6G	FORD	F81U-10300-BC	1-2270-31FD		8262-11	A8262FD-11

1302	12V	60A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E43F-10300-PA	1-1784-30FD		10	A7084FD
1303	12V	65A	CW	S6	IR/EF	ALTERNATOR	2G	FORD	E67F-10300-EA	20-205-30		10	A7731FD
1304	12V	95A	CW	V2	IR/IF	ALTERNATOR	3G	FORD	F1HT-10300-AA	F1HT-10300-AB		2pulley	2S
1305	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2UU-10300-CD	1-1614-14FD		6pully	6S
1306	12V	95A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F1PU-10346-DA	1-1614-13FD		8PULLY	8S
1307	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2PU-10346-DE	F2UU-10300-BE		3=7761	A7756FD-3
1308	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2UU-10300-FA			7756-3-6PULLEY	A7756FD-3-6S
1309	12V	95A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2UU-10300-CD	1-1614-14FD		3	A7758FD
1310	12V	130A	CW	S7	IR/IF	ALTERNATOR	3G	FORD	F3AU-10300-AC	1-1612-30FD		7PULLEY	A7764FD-7S
1311	12V	130A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F65U-10300-BB	1-1612-33FD		8PULLEY	A7764FD-8S
1312	12V	130A	CW	S6	IR/IF	ALTERNATOR	3G	FORD	F2PU-10346-AF	F2TU-10346-AE		6PULLEY	A7768FD-6S
1313	12V	130A	CW	S8	IR/IF	ALTERNATOR	3G	FORD	F5UU-10300-BA	1-1613-14FD		8PULLEY	4OD
1314	12V	135A	CW	SC6	IR/IF	ALTERNATOR	6G	FORD	4R3T-10300-BB	4R3Z-10346-BB	4BB1	8438=8516	A8438FD
1315	12V	105-110A			IR/IF	ALTERNATOR	6G	FORD			1		
1316	12V	130A			IR/IF	ALTERNATOR		FORD	2T1U10300CE	CA1857IR-A			CA1857IR-A
1317	12V	130A			IR/IF	ALTERNATOR		FORD	2T1U10300CA	A1857IR-B(6PK-58)			CA1857IR-B(6PK-58)
1318	12V	100A	CW	S5	IR/IF	ALTERNATOR		HITACHI	LR1100-736B	LR1100-736BR		11027	A11027HI
1319	12V	110A			IR/IF	ALTERNATOR		HITACHI	LR1110-724B	LR1110-724BR		11119	A11119HI
1320	12V	130A	CW	S7	IR/IF	ALTERNATOR		HITACHI	LR1130-701B	LR1130-701		11120	A11120HI
1321	12V	110A	CW	S7	IR/IF	ALTERNATOR		HITACHI	LR1110-725	LR1110-725B		11121	A11121HI
1322	12V	110A	CW	SC6	IR/IF	ALTERNATOR		HITACHI	LR1110-713C	JA1712IR	443158	11163	A11163HI
1323	12V	130A	CW	S7	IR/IF	ALTERNATOR		HITACHI	LR1130-703			11165	A11165HI
1324	12V	136A	CW	S6	ED/IF	ALTERNATOR		HITACHI	421000-0680	04801632AA		11448	A11448ND
1325	12V	70A			IR/EF	ALTERNATOR		HITACHI	LR170-418B	204-329		12097	A12097HI
1326	12V	65A			IR	ALTERNATOR		HITACHI	LR165-04			12238	A12238HI
1327	12V	70A			IR	ALTERNATOR		HITACHI	LR170-427BA	204-328		12273	A12273HI
1328	24V	25A	CW	V2	IR/EF	ALTERNATOR		HITACHI	LR225-841T	204-204		12324	A12324HI
1329	12V	80A			IR/EF	ALTERNATOR		HITACHI	LR180-509	LR180-509CN		12335	A12335HI
1330	12V	80A			IR/EF	ALTERNATOR		HITACHI	LR180-509C	LR180-509B		12336	A12336HI
1331	24V	80A			IR/EF	ALTERNATOR		HITACHI	LR280-501M	LR280-501		12718	A12718HI
1332	12V	90A	CW		IR	ALTERNATOR		HITACHI	LR190-516		400-44126	12764	A12764HI
1333	12V	65A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR165-707B	1-1128-01		13250	A13250HI
1334	12V	110A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-701	1-1478-01HI		13261	A13261HI
1335	12V	90A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR190-706	LR190-706H		13262	A13262HI
1336	12V	80A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR180-729	1-1102-01HI		13273	A13273HI
1337	12V	70A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR170-734	LR170-734B		13285	A13285HI
1338	12V	60A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR160-723	LR160-723B		13287	A13287HI
1339	12V	80A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR180-724	1-1107-01HI		13324	A13324HI
1340	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-719	LR180-719		13327	A13327HI
1341	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-725	1-1427-01HI		13329	A13329HI
1342	12V	70A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR170-738	1-1423-01HI		13334	A13334HI
1343	12V	60A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR160-724			13336	A13336MI
1344	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-736	1-1120-01HI		13474	A13474HI
1345	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-725B	LR180-725C		13476	A13476HI
1346	12V	95A	CW	S5	IR/IF	ALTERNATOR		HITACHI	LR195-701	CA13477N		13477	A13477HI

1347	12V	60A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR160-724			13531	A13531HI
1348	12V	70A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR170-739	1-1429-01HI		13533	A13533HI
1349	12V	80A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR180-734	LR180-734B		13534	A13534HI
1350	12V	60A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR160-726	LR160-726B		13564	A13564HI
1351	12V	125A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1125-702B	1-1921-01HI		13612	A13612HI
1352	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-744	1-2152-01HI		13636	A13636HI
1353	12V	70A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR170-748	1-2001-01HI		13637	A13637HI
1354	12V	90A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR190-729	LR190-729C		13638	A13638HI
1355	12V	110A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-705	1-2098-01HI		13639	A13639HI
1356	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-741	LR180-741H		13640	A13640HI
1357	12V	80A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR180-742	1-2013-01HI		13641	A13641HI
1358	12V	90A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR190-724	CA13642N		13642	A13642HI
1359	12V	70A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR170-745	LR170-745B		13643	A13643HI
1360	12V	60A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR160-727	1-2002-01HI		13644	A13644HI
1361	12V	85A	CW	S5	IR/IF	ALTERNATOR		HITACHI	LR185-701	1-2015-01HI		13645	A13645HI
1362	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-711	LR1100-711B		13657	A13657HI
1363	12V	110A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-707C	1-2192-01HI		13712	A13712HI
1364	12V	90A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR190-737	LR190-737B		13713	A13713HI
1365	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-716	1-2125-01HI		13724	A13724HI
1366	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-751	LR180-751R		13728	A13728HI
1367	12V	60A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR160-729C	CA13744N		13744	A13744HI
1368	12V	60A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR160-730	1-2089-01HI		13745	A13745HI
1369	12V	60A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR160-731	1-2089-02HI		13757	A13757HI
1370	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-709	1-2193-01HI		13760	A13760HI
1371	12V	70A	CW	V1	IR/IF	ALTERNATOR		HITACHI	LR170-766	1-2191-01HI		13778	A13778HI
1372	12V	70A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR170-758	1-2212-01HI		13788	A13788HI
1373	12V	80A	CW	S5	IR/IF	ALTERNATOR		HITACHI	LR180-756B	LR180-756		13789	A13789HI
1374	12V	90A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR190-744	1-2240-01HI		13825	A13825HI
1375	12V	110A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-710F	1-2382-01HI		13826	A13826HI
1376	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-722	LR1100-722R		13827	A13827HI
1377	12V	100A			IR/IF	ALTERNATOR		HITACHI	LR1100-723	LR1100-723R		13828	A13828HI
1378	12V	90A	CW	S5	IR/IF	ALTERNATOR		HITACHI	LR190-742	LR190-742R		13829	A13829HI
1379	12V	80A	CW	S4	ED/IF	ALTERNATOR		HITACHI	LR180-766	LR180-766		13895	A13895HI
1380	12V	110A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-712	1-2490-01HI		13900	A13900HI
1381	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-725	LR1100-725B		13901	A13901HI
1382	12V	90A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR190-743	8972043260		13935	A13935HI
1383	12V	80A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR180-769			13937	A13937HI
1384	12V	110A	CW	SC6	IR/IF	ALTERNATOR		HITACHI	LR1100-734	1-2450-01HI		13939	A13939HI
1385	12V	120A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1110-721	1-2492-01HI		13940	A13940HI
1386	12V	50A			IR/EF	ALTERNATOR		HITACHI	LR150-33, LR150-36, LR150-50	JA104IR		14255	A14255HI
1387	12V	50A			IR/EF	ALTERNATOR		HITACHI	LR150-201	JA661IR		14648	A14648HI
1388	12V	90A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR190-709	1-1122-01HI		14661	A14661HI
1389	12V	60A	CW	S4	IR/IF	ALTERNATOR		HITACHI	LR160-715	1-1125-01HI		14719	A14719HI
1390	12V	70A			IR/EF	ALTERNATOR		HITACHI		LR170-401		14735	A14735HI
1391	12V	80A			IR/IF	ALTERNATOR		HITACHI	LR180-513B			20095	A20095HI

1392	12V	60A			IR/EF	ALTERNATOR		HITACHI	114766	37300-4Z300		20218	A20218HI
1393	12V	80A			IR/EF	ALTERNATOR		HITACHI	LR180-761	LR180-761		20390	A20390HI
1394	12V	50A			IR	ALTERNATOR		HITACHI	LR130-431, LR150-422	JA680IR		20896	A20896HI
1395	12V	80A			IR	ALTERNATOR		HITACHI	LR180-501	JA1290IR		21262	A21262HI
1396	12V	70A			IR/EF	ALTERNATOR		HITACHI	LR170-505	LR170-505B		21302	A21302HI
1397	12V	100A			IR/EF	ALTERNATOR		HITACHI	LR1100-501, LR1100-501P	JA1370		21303	A21303HI
1398	12V	80A			IR/IF	ALTERNATOR		HITACHI	LR180-762	23100-AU000		21459	A21459HI
1399	12V	70A	CW	S6	IR	ALTERNATOR		HITACHI	LR170-509	JA1526IR	443172	21705	A21705HI
1400	12V	100A	CW	S6	IR/IF	ALTERNATOR		HITACHI	LR1100-502	LR1100-502E	443146	21830	A21830HI
1401	12V	100A	CW	SC6	IR/IF	ALTERNATOR		HITACHI	62-04-140	LR1100-503		21832	A21832HI
1402	12V	60A			IR/EF	ALTERNATOR		HITACHI	LR100-412, LR160-412P	JA180IR		22254	A22254HI
1403	12V	60A			IR/EF	ALTERNATOR		HITACHI	9120334631	JA1117IR		22393	A22393HI
1404	12V	70A	CW	V2	IR/EF	ALTERNATOR		HITACHI	23100-02N14, 22100-02N15	LR170-407		22394	A22394HI
1405	12V	70A			IR	ALTERNATOR		HITACHI	LR170-413P, LR170-415P	JA871IR		22424	A22424HI
1406	12V	70A			IR/EF	ALTERNATOR		HITACHI	LR170-413P, LR170-415P	JA874IR		22430	A22430HI
1407	12V	60A			IR	ALTERNATOR		HITACHI	LR160 - 426	JA780IR		22478	A22478HI
1408	12V	60A			IR	ALTERNATOR		HITACHI	LR160-728B	JA1516IR		22663	A22663HI
1409	12V	90A			IR/IF	ALTERNATOR		HITACHI	JA100Z, JA160Z	LR190-752		23215	A23215HI
1410	24V	25A			IR	ALTERNATOR		HITACHI	09447-25500,LRZZ 5 400	JA1171IR		23445	A23445HI
1411	12V	100A	CW	SC6	IR/IF	ALTERNATOR		HITACHI	LR1100-508	LR1100-508F	443133	23802	A23802HI
1412	12V	110A	CW	SC6	IR/IF	ALTERNATOR		HITACHI	LR1110-502, LR1110-502	JA1900IR	443093	23804	A23804HI
1413	12V	90A			IR	ALTERNATOR		HITACHI	LR190-750	LR190-750B		23846	A23846HI
1414	12V	90A			IR/IF	ALTERNATOR		HYUNDAI		37300-2B510		13209	A13209VA
1415	12V	120A			IR	ALTERNATOR		ISKRA	AAK5101, AAK5216	IA0925		12683	A12683IK
1416	12V	90A			IR	ALTERNATOR		ISKRA	AAK5125	IA0738		12686	A12686IK
1417	12V	70A			IR	ALTERNATOR		ISKRA	AAK5175	JA1179IR		12786	A12786IK
1418	12V	60A			IR	ALTERNATOR		ISKRA		CA1048IR		13208	A13208IK
1419	12V	34A			IR/EF	ALTERNATOR		ISKRA		CA17H		14029	A14029IK
1420	12V	30A			ER	ALTERNATOR		ISKRA	5473145	CA115		20123	A20123IK
1421	12V	55A			IR/EF	ALTERNATOR		ISKRA	912033107Z,2927 070	CA126IR		20227	A20227IK
1422	12V	80A	CW	S6	IR/IF	ALTERNATOR		ISKRA	AAK5710	CA1340IR		21356	A21356IK
1423	12V	90A			IR	ALTERNATOR		ISKRA	AAK5721	CA1743IR		21426	A21426IK
1424	12V	100A				ALTERNATOR		ISKRA	F864722	CA1191IR		21810	A21810IK
1425	12V	80A			IR	ALTERNATOR		ISKRA	AAK5371	CA639IR		22448	A22448IK
1426	12V	120A			IR/IF	ALTERNATOR		ISKRA	AAK5700, AAK5700	CA1661IR		23059	A23059IK
1427	12V	95A			IR	ALTERNATOR		ISKRA	AAK5157	IA0830		23193	A23193IK
1428	12V	120A			IR/IF	ALTERNATOR		ISKRA	114000, 11 202 201	IA1161		24097	A24097IK
1429	12V	100A			IR/IF	ALTERNATOR		ISKRA		CA1473IR			
1430	12V	100A			IR/IF	ALTERNATOR		ISKRA		CA1473IR			
1431	12V	70A			IR/IF	ALTERNATOR		ISKRA	CA1330IR				
1432	12V	70A			IR/EF	ALTERNATOR		ISKRA	AAK3164	JA1172IR			
1433	12V	70A			IR	ALTERNATOR		ISKRA	AAK5175	JA1179IR			
1434	12V	70A			IR/EF	ALTERNATOR		ISKRA	AAK3178	JA660IR			
1435	12V	70A			IR/EF	ALTERNATOR		ISKRA	AAK3161	JA863IR			
1436	12V	70A	CW	S4	IR/IF	ALTERNATOR		KIA	OK241-18-300			13863	A13863MD

1437	12V	80A	CW	S4	IR/IF	ALTERNATOR		KIA	0K300-18-300			13936	A13936MD
1438	12V	80A	CW	S4	IR/IF	ALTERNATOR		KIA	0K300-18-300, 0K300-18-300			13936	A13936KA
1439	24V	90A	BI		IR/EF	ALTERNATOR		NEVILLE	2511JB	2511JB		7610	A7610LN
1440	12V	105A	BI		IR/EF	ALTERNATOR	2500J	NEVILLE	A001090549,	1-2319-00LN		7611	A7611LN
1441	12V	130A	BI		IR/EF	ALTERNATOR	2300-2800J	NEVILLE	A0012700LC	CA7612N		7612	A7612LN
1442	12V	160A	CW		IR/EF	ALTERNATOR	2300-2800J	NEVILLE	2800J	1-1937-00LN		7613	A7613LN
1443	12V	35A	BI		ER	ALTERNATOR		NEVILLE	7701AA	7702AA		7643	A7643LN
1444	12V	165A	CW	V2	IR/EF	ALTERNATOR		NEVILLE	7706JA	A001090754,		7767	A7767LN
1445	12V	165A	BI	S8	IR/EF	ALTERNATOR		NEVILLE	7711JARM,	1-2141-00LN		7772	A7772LN
1446	24V					ALTERNATOR		LEECE-NEVILLE	7804JA				A7804LN
1447	12V	95A	CW		IR/IF	ALTERNATOR		LETRIKA (ISKRA)	AAK5110, AAKE215			12682	A12682IK
1448	12V	55A			IR/EF	ALTERNATOR	A127	LUCAS	A2517, LRA00460	CA600IR		12046	A12046LU
1449	12V	70A			IR/EF	ALTERNATOR		LUCAS	24215	CA305IR		12144	A12144LU
1450	12V	65A			IR/EF	ALTERNATOR		LUCAS	LRA00527	JA756IR		12291	A12291LU
1451	24V	30A			IR/EF	ALTERNATOR		LUCAS	24299	CA1050IR		12428	A12428LU
1452	12V	72A			IR	ALTERNATOR		LUCAS	RV87VG10300AB	CA650IR		20463	A20463LU
1453	12V	55A			IR/EF	ALTERNATOR	A127	LUCAS	0120488189	CA561IR		21121	A21121BO
1454	12V	70A			IR/EF	ALTERNATOR		LUCAS	F864452	CA717IR		21158	A21158LU
1455	12V	70A	CW	S4	IR/EF	ALTERNATOR		LUCAS	924F-10300-AB, 024X-10200-AB	022394A, 54022394B,		23681	A23681LU
1456	12V	55A	CW	S8	IR/EF	ALTERNATOR		MAGNETON	9-515-170	9-515-241		12130	A12130MG
1457	12V	55A			IR	ALTERNATOR		MAGNETON	9-510-001, 9-510-662	CA589IR		20567	A20567MG
1458	12V	90A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB190058			13702	A13702MD
1459	12V	70A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB170066	1-2104-01MD		13730	A13730MD
1460	12V	80A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB180092	1-2105-01MD		13731	A13731MD
1461	12V	95A	CW	S6	IR/IF	ALTERNATOR		MANDO	AB195116	AB195116		13782	A13782MD
1462	12V	95A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB195125	AB195126		13783	A13783MD
1463	12V	70A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB170094			13785	A13785MD
1464	12V	80A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB180128			13839	A13839MD
1465	12V	80A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB180140			13948	A13948MD
1466	12V	120A	CW	S6	IR/EF	ALTERNATOR		MANDO	AB112145			13967	A13967MD
1467	12V	90A	CW	S4	IR/IF	ALTERNATOR		MANDO	AB190147			13973	A13973MD
1468	12V	65A			IR/IF	ALTERNATOR		MANDO	90314230, 06280672	JA1600IR		21431	A21431MD
1469	12V	90A				ALTERNATOR		MANDO		JA1717IR		22956	A22956MD
1470	12V	75A			IR/IF	ALTERNATOR		MANDO	AF175363	JA1711IR		22961	A22961MD
1471	12V	65A			IR	ALTERNATOR		MANDO	AD165206	JA1618IR		23071	A23071MD
1472	12V	110A			IR/IF	ALTERNATOR		MANDO	AF111393	JA1804IR		23791	A23791MD
1473	24V	27A			IR/EF	ALTERNATOR		MARELLI	63320025	CA212IR		12026	A12026MM
1474	12V	55A	CW	V1	IR/EF	ALTERNATOR		MARELLI	63320100, 62221100			12583	A12583MM
1475	12V	65A			IR	ALTERNATOR		MARELLI	63320049	CA355IR		12584	A12584MM
1476	12V	75A	CW		IR/IF	ALTERNATOR		MARELLI	63377401, MAN7461			12736	A12736MM
1477	24V	80A			IR/IF	ALTERNATOR		MARELLI	924G 914G	225-3147		12814	A12814MM
1478	12V	42A		V2	ER	ALTERNATOR		MARELLI	63303001			13092	A13092MM
1479	12V	65A			IR	ALTERNATOR		MARELLI	63307604	CA254IR		14294	A14294MM
1480	12V	45A			IR/EF	ALTERNATOR		MARELLI	63307108	CA307IR		20262	A20262MM
1481	12V	120A	CW	SC6	IR/IF	ALTERNATOR		MARELLI	63321859	CA1698IR		20539	A20539MM

1482	12V	55A			IR	ALTERNATOR		MARELLI	63320003	CA1435IR		20600	A20600MM
1483	12V	45A			IR/EF	ALTERNATOR		MARELLI	005320102010, 633200102	CA350IR		20695	A20695MM
1484	12V	55A	CW	V1	IR/EF	ALTERNATOR		MARELLI	63321067	CA572	443192	20696	A20696MM
1485	12V	65A			IR	ALTERNATOR		MARELLI	0120488254	CA506IR		20746	A20746MM
1486	12V	75A	CW	S4	IR/IF	ALTERNATOR		MARELLI	005320219, 633200452	3IR, CA1844IR, CA	443122	20984	A20984MM
1487	12V	65A			IR/EF	ALTERNATOR		MARELLI	005320048010, 063320072010	CA596IR		21178	A21178MM
1488	12V	55A	CW	V1	IR/EF	ALTERNATOR		MARELLI	4395131	63320047		21181	A21181MM
1489	12V	55A	CW	V1	IR/EF	ALTERNATOR		MARELLI	005320094010, 063320023010	63321165, CA893IR	443185	21188	A21188MM
1490	12V	65A			IR/IF	ALTERNATOR		MARELLI	005320123010, 63321244	CA1084IR		21216	A21216MM
1491	12V	70A	CW	S5	IR/IF	ALTERNATOR		MARELLI	63321660	CA1217IR		21243	A21243MM
1492	12V	65A		SC6	IR	ALTERNATOR		MARELLI	63321833	CA1696IR		21244	A21244MM
1493	12V	100A	CW	S6	IR/IF	ALTERNATOR		MARELLI	90VB-10300-DB, 05VB-10300-BC	63321345		21286	A21286MM
1494	12V	100A			IR/IF	ALTERNATOR		MARELLI	005341043010, 1503719040	CA1085IR		21288	A21288MM
1495	12V	75A	CW	S5	IR/IF	ALTERNATOR		MARELLI	003321600010, 063321607010	3321276, 63321361, 63321617		21292	A21292MM
1496	12V	75A			IR/IF	ALTERNATOR		MARELLI	90VB-10300-DB, 05VB-10300-BC	CA1220IR		21328	A21328MM
1497	12V	80A	CW	S6	IR/IF	ALTERNATOR		MARELLI	005321030010, 08AB-10200-DB	3321678, 63341678		21358	A21358MM
1498	12V	90A			IR/EF	ALTERNATOR		MARELLI	0123320014	CA1071IR		21364	A21364MM
1499	12V	65A	CW	S6	IR/IF	ALTERNATOR		MARELLI	0053210311, 063321611	CA1109IR, CA11 6010		21423	A21423MM
1500	12V	100A			IR/IF	ALTERNATOR		MARELLI	005321800010, 063321802010	CA1208IR		21448	A21448MM
1501	12V	65A	CW	S4	IR/EF	ALTERNATOR		MARELLI	63321173	CA851IR	443195	21525	A21525MM
1502	12V	70A	CW	S5	IR/IF	ALTERNATOR		MARELLI	90VF-10300-AA, 05VF-10200-AB	63321666, 63321695, 63341695, MA		21760	A21760MM
1503	12V	80A	CW	S5	IR/IF	ALTERNATOR		MARELLI	5705E2	723, 63321772, 63341723		21802	A21802MM
1504	12V	85A			IR	ALTERNATOR		MARELLI	005321402010, 633200204	CA1222IR		22539	A22539MM
1505	12V	65A	CW	S6	IR/IF	ALTERNATOR		MARELLI	5705GV	3321282, 63321367, 63321615		22572	A22572MM
1506	12V	85A			IR	ALTERNATOR		MARELLI	63321302	CA1161IR		22573	A22573MM
1507	12V	55A			IR	ALTERNATOR		MARELLI	63321112	CA129IR		22722	A22722MM
1508	12V	65A	CW	S4	IR/IF	ALTERNATOR		MARELLI	46430526	CA1158IR		22734	CA1158IR
1509	12V	75A	CW	S4	IR/IF	ALTERNATOR		MARELLI	005341690010, 63321668	CA1734IR	443095	23001	A23001MM
1510	12V	100A			IR/IF	ALTERNATOR		MARELLI	005321806010, 063321800010	CA1189		23068	A23068MM
1511	12V	100A			IR/IF	ALTERNATOR		MARELLI	06333840010, 063338400	CA1223IR		23069	A23069MM
1512	12V	85A		SC6	IR/IF	ALTERNATOR		MARELLI	46762522	805, 63321819, MA	443089	23104	A23104MM
1513	12V	100A	CW	SC6	IR/IF	ALTERNATOR		MARELLI	63321497	CA1558IR	443066	23105	A23105MM
1514	12V	120A	CW	S6	IR/IF	ALTERNATOR		MARELLI	40231071, 46420520	3321491, 63321858		23315	A23315MM
1515	12V	55A			IR	ALTERNATOR		MARELLI	63321044	CA642IR		23695	A23695MM
1516	12V	65A			IR/IF	ALTERNATOR		MARELLI	63321234	CA1153IR	443139	23756	A23756MM
1517	12V	105A	CW	S6	IR/IF	ALTERNATOR		MARELLI	1204433, 12117240	102211-8640		23806	A23806MM
1518	12V	90A			IR/IF	ALTERNATOR		MARELLI	63321760	CA2059IR		23828	A23828MM
1519	12V	70A			IR	ALTERNATOR		MARELLI	51400	CA2077IR		23933	A23933MM
1520	12V	70A			IR/IF	ALTERNATOR		MARELLI	06C00102211, 102211-8430	CA1742IR	443129	24018	A24018MM
1521	12V	105A			IR/IF	ALTERNATOR		MARELLI	46813065	CA1998IR		24019	A24019MM
1522	12V	140A	CW	SC6		ALTERNATOR		MARELLI		CA2062IR		24085	A24085MM
1523	12V	105A	CW	S5	IR/IF	ALTERNATOR		MARELLI	102211-8460	CA1998IR	440852, 443032		A24019MM
1524	12V	90A			IR/IF	ALTERNATOR		MARELLI	005321740, 63321838	CA1475IR		20142	A20142MM
1525	12V	65A			IR/IF	ALTERNATOR		MARELLI	63321718	CA1488IR		21370	A21370MM
1526	12V	65A			IR/IF	ALTERNATOR		MARELLI	63321328	CA1318IR		21901	A21901MM

1527	12V	85A			IR/IF	ALTERNATOR		MARRELLI	63321328, MAN1784,	CA1221IR		22574	A22574MM
1528	12V	85A			IR/IF	ALTERNATOR		MARRELLI	63321313,	CA1216IR		22582	A22582MM
1529	12V	85A			IR/IF	ALTERNATOR		MARRELLI	63321227,	CA1199IR		22779	A22779MM
1530	12V	75A			IR/IF	ALTERNATOR		MARRELLI	63321372,	CA1190IR		23067	A23067MM
1531	12V	110A	CW	SC6	IR/IF	ALTERNATOR		MARRELLI	63321612, 005377004010, 633277004	CA1885IR		23112	A23112MM
1532	12V	90A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TG0091			11005	A11005MI
1533	12V	110A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TJ0191	1-3192-01MI		11006	A11006MI
1534	12V	110A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TJ0291	1-3019-01MI		11007	A11007MI
1535	12V	90A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TG1391	1-2783-01MI		11008	A11008MI
1536	12V	110A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TG2391	A3TG2391ZC		11024	A11024MI
1537	12V	100A			ED/IF	ALTERNATOR		MITSUBISHI	A3TG1291, A3TG1291A	A3TG1291B		11025	A11025MI
1538	12V	200A	CW	SD6	IR/IF	ALTERNATOR		MITSUBISHI	A4TJ0181	A4TJ0181ZC		11026	A11026MI
1539	12V	90A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TB5491	1-2815-01MI		11028	A11028MI
1540	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TB5291	A3TG2491		11029	A11029MI
1541	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TB4291	1-2988-01MI		11051	A11051MI
1542	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG0191	1-3030-01MI		11052	A11052MI
1543	12V	90A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TB1791			11053	A11053MI
1544	12V	110A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A3TG1192	1-2816-01MI		11055	A11055MI
1545	12V	110A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A3TG2291			11056	A11056MI
1546	12V	105A	CW	S6	IR	ALTERNATOR		MITSUBISHI	A3TB6491			11057	A11057MI
1547	12V	90A			IR/IF	ALTERNATOR		MITSUBISHI	A2TG0391	1-3075-01MI		11058	A11058MI
1548	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG2192	A3TG2192AC		11095	A11095MI
1549	12V	140A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TA7991	1-2767-01MI		11096	A11096MI
1550	12V	140A	CW	SD6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG1581			11097	A11097MI
1551	12V	140A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A3TJ0381ZC	A3TJ0381		11115	A11115MI
1552	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG4891	A3TG4891		11118	A11118MI
1553	12V	100A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ0391		443142	11168	A11168MI
1554	12V	110A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ1181	1-3391-01MI		11169	A11169MI
1555	12V	105A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TG0691			11170	A11170MI
1556	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ0891	A3TJ0891		11172	A11172MI
1557	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ0991	A3TJ0991		11173	A11173MI
1558	12V	90A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TG4791			11174	A11174MI
1559	12V	80A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A2TC1591			11175	A11175MI
1560	12V	80A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A2TC1391	A2TC1391		11176	A11176MI
1561	12V	80A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A5TB1391	1-2960-01MI	443191	11177	A11177MI
1562	12V	115A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ0091	1-3260-01MI		11224	A11224MI
1563	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG0591			11225	A11225MI
1564	12V	110A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TG4291			11226	A11226MI
1565	12V	140A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A3TJ2581	A3TJ2581ZC		11228	A11228MI
1566	12V	140A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A3TJ1881			11229	A11229MI-NP
1567	12V	100A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A2TG0791ZC	A2TG0791		11230	A11230MI
1568	12V	115A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A2TJ0481	A2TJ0481ZC		11231	A11231MI
1569	12V	80A	CW	S5	IR/EF	ALTERNATOR		MITSUBISHI	A5TG1191			11253	A11253MI
1570	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ2391			11267	A11267MI
1571	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ2191	A3TJ2191		11269	A11269MI

1572	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ2291	A3TJ2291		11270	A11270MI
1573	12V	175A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TX0091	1-3384-01MI		11271	A11271MI
1574	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX0191	1-3223-01MI		11272	A11272MI
1575	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ1291ZC	A3TJ2891		11273	A11273MI
1576	12V	120A	CW	S6	IR	ALTERNATOR		MITSUBISHI	A003TG5591	A3TG5591		11274	A11274MI
1577	12V	105A	CW	S6	IR	ALTERNATOR		MITSUBISHI	A3TG5491			11275	A11275MI
1578	12V	105A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TG6491			11278	A11278MI
1579	12V	150A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A3TJ0691	1-3195-01MI		11315	A11315MI
1580	12V	150A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A3TJ0591	A3TJ0591		11316	A11316MI
1581	12V	120A			IR/IF	ALTERNATOR		MITSUBISHI	A3TG4491	A3TG4491ZC		11317	A11317MI
1582	12V	110A	CW	S5	IR	ALTERNATOR		MITSUBISHI	A3TG5691			11329	A11329MI
1583	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ1191			11330	A11330MI
1584	12V	150A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A003TJ1991	A3TJ1991		11340	A11340MI
1585	12V	130A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ1791	A3TJ1791ZC		11341	A11341MI
1586	12V	100A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A2TJ0791			11342	A11342MI
1587	12V	110A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ0281		443098	11343	A11343MI
1588	12V	120A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ0291	23100-EM01A		11344	A11344MI
1589	12V	135A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A3TL0081			11376	A11376MI
1590	12V	120A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A003TG3181	CA2013IR		11377	A11377MI
1591	12V	110A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TJ1091	LFB6-18-300		11398	A11398MI
1592	12V	95A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A005TJ0091	A5TJ0091	443137	11410	A11410MI
1593	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX0391			11411	A11411MI
1594	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ3091	A-80491		11412	A11412MI
1595	12V	100A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A2TG1581			11413	A11413MI
1596	12V	110A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ0581	A-80574		11414	A11414MI
1597	12V	130A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ2091			11416	A11416MI
1598	12V	140A	CW	S6	IR	ALTERNATOR		MITSUBISHI	A3TG4191			11421	A11421MI
1599	12V	100A			ED/IF	ALTERNATOR		MITSUBISHI	A002TJ0392, A002TJ0202A			11422	A11422MI
1600	12V	130A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ3591	400-48261		11437	A11437MI
1601	12V	150A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ1991B			11438	A11438MI
1602	12V	160A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A002TX0281	A2TX0281		11440	A11440MI
1603	12V	150A			IR/IF	ALTERNATOR		MITSUBISHI	A002TX0091			11441	A11441MI
1604	12V	180A	CW	SC8	ED/IF	ALTERNATOR		MITSUBISHI	A3TX0381			11443	A11443MI
1605	12V	180A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A3TX0391			11477	A11477MI
1606	12V	80A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A5TG1491	A-80494		11480	A11480MI
1607	12V	80A	CW		IR/IF	ALTERNATOR		MITSUBISHI	A5TG2079			11536	A11536MI
1608	12V	95A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A5TJ0191			11537	A11537MI
1609	12V	130A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A3TJ3991			11538	A11538MI
1610	12V	200A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A4TX0091ZC			11540	A11540MI
1611	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX1591			11541	A11541MI
1612	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX1691			11542	A11542MI
1613	12V	200A	CW	SD6	IR/IF	ALTERNATOR		MITSUBISHI	A4TJ0182			11543	A11543MI
1614	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX1491	400-48268		11544	A11544MI
1615	12V	100A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TG1691			11546	A11546MI
1616	12V	110A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ1791			11547	A11547MI

1617	12V	150A	CCW	SC6	IR/IF	ALTERNATOR		mitsubishi	A2TX2081	400-48269		11550	A11550MI
1618	12V	150A	CW	SC4	IR/IF	ALTERNATOR		mitsubishi	A2TX2581			11551	A11551MI
1619	12V	160A			ER/IF	ALTERNATOR		mitsubishi	A002TX3581			11554	A11554MI
1620	12V	110A	CW	SC6	IR/IF	ALTERNATOR		mitsubishi	A3TG6781			11556	A11556MI
1621	12V	75A	CW	SC6	IR/IF	ALTERNATOR		mitsubishi	A5TG1881	A-80476		11564	A11564MI
1622	12V	90A	CW	S4	IR/IF	ALTERNATOR		mitsubishi	A005TG0991	CA2012IR	443123	11565	A11565MI
1623	12V	90A	CW	S6	ED/IF	ALTERNATOR		mitsubishi	A2TG1391		443157	11578	A11578MI
1624	12V	100A			IR/IF	ALTERNATOR		mitsubishi	A002TL0091A			11579	A11579MI
1625	12V	110A	CW	S5	IR/IF	ALTERNATOR		mitsubishi	A3TG6591			11613	A11613MI
1626	12V	200A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A4TX0191			11614	A11614MI
1627	12V	110A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A2TL0291			11631	A11631MI
1628	12V	110A	CW	S6	ED/IF	ALTERNATOR		mitsubishi	A2TJ1591			11635	A11635MI
1629	12V	120A	CW	SC6	ED/IF	ALTERNATOR		mitsubishi	A2TL0381			11638	A11638MI
1630	12V	175A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A3TX0691			11649	A11649MI
1631	12V	175A	CW	SC4	IR/IF	ALTERNATOR		mitsubishi	A3TX1382			11655	A11655MI
1632	12V	110A	CW	SC6	IR/IF	ALTERNATOR		mitsubishi	A2TJ1881			11657	A11657MI
1633	12V	150A	CW	SC4	IR/IF	ALTERNATOR		mitsubishi	A2TX2681			11668	A11668MI
1634	12V	130A			IR/IF	ALTERNATOR		mitsubishi	A002TX3581, A002TX2281A			11683	A11683MI
1635	12V	175A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A3TX0692			11684	A11684MI
1636	12V	140A	CW	SC6	ED/IF	ALTERNATOR		mitsubishi	A2TX3481			11687	A11687MI-NP
1637	12V	175A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A3TX1691			11688	A11688MI
1638	12V	230A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A3TV0891			11916	A11916MI
1639	12V	210A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A3TV0791			11917	A11917MI
1640	12V	90A	CW	S5	IR/IF	ALTERNATOR		mitsubishi	A2TG1891			11995	A11995MI
1641	12V	100A	CW	S5	IR/IF	ALTERNATOR		mitsubishi	A3TG6591B	400-48243		11998	A11998MI
1642	12V	40A	CW		IR/IF	ALTERNATOR		mitsubishi	A7T03877	1-2480-01MI		12077	A12077MI
1643	12V	35A	CW	V1	IR/IF	ALTERNATOR		mitsubishi	A7T03371	1-2062-01MI		12136	A12136MI
1644	12V	40A	CW	V1	IR/IF	ALTERNATOR		mitsubishi	A7T03277	1-1960-01MI		12138	A12138MI
1645	12V	40A	CW	V1	IR/IF	ALTERNATOR		mitsubishi	A0125171, A0125271			12231	A12231MI
1646	12V	65A	CW	V1	IR/IF	ALTERNATOR		mitsubishi	A3T03471	AMT0054		12303	A12303MI
1647	24V	30A	CW	V2	IR/EF	ALTERNATOR		mitsubishi	A2112900, A2122007			12308	A12308MI
1648	12V	50A			IR/IF	ALTERNATOR		mitsubishi	A002TA2871	A002TA2871A		12311	A12311MI
1649	12V	60A	CW	V1	IR/IF	ALTERNATOR		mitsubishi	A1TA1777			12318	A12318MI
1650	12V	45A	CW	V1	IR/IF	ALTERNATOR	INDUSTRIAL	mitsubishi	A7TA3577, A7TA3577A	1C010-64010		12363	A12363MI
1651	12V	40A	CW	V1	IR/IF	ALTERNATOR	INDUSTRIAL	mitsubishi	A7TA0577A, A7TA0171B	VA30A6800801		12432	A12432MI
1652	24V	30A			IR/EF	ALTERNATOR		mitsubishi		JA1427IR		12551	A12551MI
1653	24V	35A			IR/IF	ALTERNATOR		mitsubishi	A3TN5188	4D33		12602	A12602MI
1654	12V	50A			IR	ALTERNATOR		mitsubishi	111240,A2T01384	JA775IR		12619	A12619MI
1655	12V	90A			IR/IF	ALTERNATOR		mitsubishi	A3T09198	JA1376IR		12626	A12626MI
1656	12V	65A			IR/EF	ALTERNATOR		mitsubishi	986042311	JA674IR		12627	A12627MI
1657	24V	25A			IR	ALTERNATOR		mitsubishi	2010	4D30 24V		12641	A12641MI
1658	12V	65A			IR/EF	ALTERNATOR		mitsubishi	A002T01783	JA585IR		12642	A12642MI
1659	12V	75A			IR	ALTERNATOR		mitsubishi	A002TN1199	JA1271IR		12643	A12643MI
1660	12V	80A			IR	ALTERNATOR		mitsubishi		JA1533IR		12644	A12644MI
1661	12V	90A			IR/IF	ALTERNATOR		mitsubishi	A003TA0491, A003TA2391A	A003TA2391A		12647	A12647MI

1662	12V	65A			IR	ALTERNATOR		MITSUBISHI	A2T82899	JA1183IR		12666	A12666MI
1663	12V	90A			IR/IF	ALTERNATOR		MITSUBISHI	A3T1N0099, A2T1N0600A	JA1419IR		12667	A12667MI
1664	12V	200A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A4TX0091			12878	A12878MI
1665	12V	130A			IR/IF	ALTERNATOR		MITSUBISHI	A002TX2491			12883	A12883MI
1666	12V	75A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A3T01596	1-1180-01MI		13188	A13188MI
1667	12V	75A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A3T01496	1-1182-01MI		13189	A13189MI
1668	12V	75A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A3T01598	1-1180-02MI		13190	A13190MI
1669	12V	70A	CW	S3	IR/IF	ALTERNATOR		MITSUBISHI	A002T05892	A002T05893		13196	A13196MI
1670	12V	65A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T09691	1-1187-01MI		13197	A13197MI
1671	12V	55A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A1T05191, A2T00101			13213	A13213MI
1672	12V	130A			IR/IF	ALTERNATOR		MITSUBISHI	A002TX0881A			13226	A13226MI
1673	12V	60A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A5T01577	1-1160-01MI		13227	A13227MI
1674	12V	80A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A2T17574	1-1164-01MI		13237	A13237MI
1675	12V	75A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A3T41876	1-1216-01MI		13238	A13238MI
1676	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T14972	1-1434-01MI		13249	A13249MI
1677	12V	75A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T02193	1-1202-01MI		13257	A13257MI
1678	12V	110A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A2TJ1381	A2TJ2081		13258	A13258MI
1679	12V	60A			IR/EF	ALTERNATOR		MITSUBISHI	A1T02292	A1T02291		13266	A13266MI
1680	12V	65A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A3T03492	1-1189-01MI		13271	A13271MI
1681	12V	70A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A2T13977	1-1150-01MI		13282	A13282MI
1682	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A3T45693	1-1227-01MI		13289	A13289MI
1683	12V	65A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T04493	1-1215-01MI		13290	A13290MI
1684	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A3T05192	1-1108-01MI		13293	A13293MI
1685	12V	50A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A5T00972	1-1176-01MI		13295	A13295MI
1686	12V	70A	CW	S3	IR/IF	ALTERNATOR		MITSUBISHI	A2T20191	1-1145-01MI		13297	A13297MI
1687	12V	90A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3T00896	1-1175-01MI		13298	A13298MI
1688	12V	80A	CW	S3	IR/IF	ALTERNATOR		MITSUBISHI	A2T20091	1-1143-01MI		13299	A13299MI
1689	12V	65A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A5T00877	1-1137-01MI		13314	A13314MI
1690	12V	70A	CCCW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA1191	A5TA1191ZC		13330	A13330MI
1691	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T07292	A2T07292A,		13332	A13332MI
1692	12V	80A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A2T18874	324-13337		13337	A13337MI
1693	12V	65A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A2T34477	1-1177-01MI		13350	A13350MI
1694	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A4T01493	1-2430-01MI		13351	A13351MI
1695	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T00692	1-1221-01MI		13352	A13352MI
1696	12V	95A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T08891	1-1875-01MI		13406	A13406MI
1697	12V	55A	CW	S3	IR/IF	ALTERNATOR		MITSUBISHI	A5T07092	31400-60AC1		13415	A13415MI
1698	12V	65A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T34892	1-1832-01MI		13430	A13430MI
1699	12V	65A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A5T01977	1-1428-01MI		13432	A13432MI
1700	12V	90A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A4T01093, A4T02001			13435	A13435MI
1701	12V	65A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T35092	1-1832-01MI		13439	A13439MI
1702	12V	80A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T33891	1-1598-01MI		13445	A13445MI
1703	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T08491	A3T08491ZC		13446	A13446MI
1704	12V	120A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A6T41591	1-1590-01MI		13447	A13447MI
1705	12V	120A	CW	S6	IR/EF	ALTERNATOR		MITSUBISHI	A6T41491	1-1589-01MI		13448	A13448MI
1706	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T38892	1-1833-01MI		13450	A13450MI

1707	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T38391	1-1829-01MI		13451	A13451MI
1708	12V	100A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T08591	1-1828-01MI		13460	A13460MI
1709	12V	110A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A4T01192	A4T01192ZC		13473	A13473MI
1710	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T33593	1-1830-01MI		13478	A13478MI
1711	12V	75A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2T39091	1-1891-01MI		13479	A13479MI
1712	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A3T07592	1-1599-01MI		13511	A13511MI
1713	12V	70A			IR/IF	ALTERNATOR		MITSUBISHI	A2T33991	1-1873-01MI		13523	A13523MI
1714	12V	80A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2T13894	1-1427-01MI		13549	A13549MI
1715	12V	70A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T39391	1-1956-01MI		13559	A13559MI
1716	12V	60A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5T03391	1-1952-01MD		13574	A13574MI
1717	12V	90A	CW	S6	ER/IF	ALTERNATOR		MITSUBISHI	A2TA3791	1-1928-01MI		13575	A13575MI
1718	12V	110A	CW	S5	ER/IF	ALTERNATOR		MITSUBISHI	A3T14292	1-1992-01MI		13577	A13577MI
1719	12V	90A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A2T81291	1-1874-01MI		13580	A13580MI
1720	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T80491	1-2117-01MI		13582	A13582MI
1721	12V	75A			IR/IF	ALTERNATOR		MITSUBISHI	JA11671R	A2T38391-R		13583	A13583MI
1722	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T82791	1-2101-01MI		13585	A13585MI
1723	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TA0891	1-2023-01MI		13586	A13586MI
1724	12V	95A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3T12491	1-2076-01MI		13596	A13596MI
1725	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3T12291	1-2115-01MI		13597	A13597MI
1726	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T12391	1-2114-01MI		13598	A13598MI
1727	12V	65A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T80391	1-1957-01MI		13614	A13614MI
1728	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3T14491	1-1958-01MI		13615	A13615MI
1729	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T80591	1-1959-01MI		13616	A13616MI
1730	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TA2191	1-2095-01MI		13648	A13648MI
1731	12V	75A	CCW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA4591	A5TA4591		13649	A13649MI
1732	12V	80A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T39291	1-2096-01MI		13650	A13650MI
1733	12V	85A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TA0791	1-2147-01MI		13692	A13692MI
1734	12V	90A	CW		IR	ALTERNATOR		MITSUBISHI	A2T38291			13694	A13694MI
1735	12V	70A	CCW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5T06391	1-1876-01MI		13700	A13700MI
1736	12V	60A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA1891	1-2242-01MI		13716	A13716MI
1737	12V	70A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA0391	1-2205-01MI		13717	A13717MI
1738	12V	70A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A2TB0091	1-2061-01MI		13718	A13718MI
1739	12V	80A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TB0191	1-2447-01MI	443101	13719	A13719MI
1740	12V	80A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2T82491	A002T82491A		13723	A13723MI
1741	12V	85A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A2TB1491	1-2107-01MI		13735	A13735MI
1742	12V	110A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TA4091	1-2116-01MI		13749	A13749MI
1743	12V	80A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TA5191	1-2118-02MI		13750	A13750MI
1744	12V	80A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TA4991	1-2118-01MI		13751	A13751MI
1745	12V	75A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TA7691	1-2097-01MI		13752	A13752MI
1746	12V	90A	CCW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA3591	1-2195-01MI		13762	A13762MI
1747	12V	110A	CW	S6	ER/IF	ALTERNATOR		MITSUBISHI	A3TA4191	1-2176-01MI		13764	A13764MI
1748	12V	60A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA3891	1-2223-01MI		13780	A13780MI
1749	12V	70A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A5TA4291BC	1-2241-01MI		13781	A13781MI
1750	12V	80A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TB0491	1-2442-01MI		13784	A13784MI
1751	12V	100A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TA1191	1-2203-01MI		13786	A13786MI

1752	12V	90A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2TA5391	1-2204-01MI		13787	A13787MI
1753	12V	75A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TB2991	1-2232-01MI		13820	A13820MI
1754	12V	125A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TA5691	1-2269-01MI		13821	A13821MI
1755	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TA5393	1-2204-02MI		13840	A13840MI
1756	12V	85A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TA7691	1-2355-01MI		13841	A13841MI
1757	12V	100A	CW	SC6	ED/IF	ALTERNATOR		MITSUBISHI	A3TB1081	1-2377-01MI		13883	A13883MI
1758	12V	85A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TA7691	1-2355-01MI		13886	A13886MI
1759	12V	100A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A3TB1891			13888	A13888MI
1760	12V	90A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TB2891	1-2499-01MI		13889	A13889MI
1761	12V	120A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A3TB2491	1-2546-01MI		13892	A13892MI
1762	12V	70A	CCW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A5TA7091	1-2509-01MI		13893	A13893MI
1763	12V	85A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A2TB5791	A2TB5791ZC		13898	A13898MI
1764	12V	95A	CW	S5	IR/IF	ALTERNATOR		MITSUBISHI	A3TB2291	A3TB2291ZC		13929	A13929MI
1765	12V	100A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A3TB2891	1-2498-01MI		13949	A13949MI
1766	12V	70A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TA7291ZC	1-2500-01MI		13950	A13950MI
1767	12V	130A	CW	SD6	ER/IF	ALTERNATOR		MITSUBISHI	A3TB1691	A3TB1691ZC		13955	A13955MI
1768	12V	90A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A2TB7591	1-2530-01MI		13966	A13966MI
1769	12V	100A	CW	S4	ER/IF	ALTERNATOR		MITSUBISHI	A2TG0191	A2TG0191ZC		13995	A13995MI
1770	12V	90A	CW	SC6	ED/IF	ALTERNATOR		MITSUBISHI	A003TG0081	A3TG0081		13996	A13996MI
1771	12V	75A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A2T03892	A2T03892		14431	A14431MI
1772	12V	110A	CW	S7	IR/IF	ALTERNATOR		MITSUBISHI	A5TL0591ZC			14488	A14488MI
1773	12V	110A	CW	SC7	IR/IF	ALTERNATOR		MITSUBISHI	A5TL0581			14489	A14489MI
1774	12V	150A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX9091			14624	A14624MI
1775	12V	55A	CW	V1	IR/EF	ALTERNATOR		MITSUBISHI	A3T32877	1-1185-01MI		14650	A14650MI
1776	12V	55A			IR/EF	ALTERNATOR		MITSUBISHI	A5T20484	1-1208-01MI		14690	A14690MI
1777	12V	50A	CW	V1	IR/EF	ALTERNATOR		MITSUBISHI	MD013740, MD022592	85, A5T20484, A5T22484		14692	A14692MI
1778	12V	60A	CW	V1	IR/IF	ALTERNATOR		MITSUBISHI	A2T05772	1-1136-01MI		14905	A14905MI
1779	24V	60A			IR/IF	ALTERNATOR		MITSUBISHI	A003TA8291	CA1852IR		20003	A20003MI
1780	12V	90A	CW	V2	IR/IF	ALTERNATOR		MITSUBISHI	A5TG0379			20073	A20073MI
1781	24V	100A	CW	S10	IR/IF	ALTERNATOR		MITSUBISHI	A4TA8591	CA2184IR		20224	A20224MI
1782	24V	120A	CW	S10	IR/IF	ALTERNATOR		MITSUBISHI	21289223	A4TA8691		20238	A20238MI
1783	12V	100A	CW	S6	ED/IF	ALTERNATOR		MITSUBISHI	A5TL0491			20288	A20288MI
1784	12V	70A			IR/IF	ALTERNATOR		MITSUBISHI	A002TC1479, A003TA1479T	JA1530IR		20590	A20590MI
1785	24V	100A			IR/IF	ALTERNATOR		MITSUBISHI	A004TA5291T, A004TB5291ZT	CA2039IR		20618	A20618MI
1786	12V	150A			IR/IF	ALTERNATOR	HAIRPIN	MITSUBISHI	A002TX4081			20864	A20864MI
1787	12V	130A	CW	SC6	IR/IF	ALTERNATOR		MITSUBISHI	A2TX1081A			20883	A20883MI
1788	24V	90A	CW	S10	IR/IF	ALTERNATOR		MITSUBISHI	A4TA8491	A4TA0591		20923	A20923MI
1789	12V	95A	CW	S4	IR/IF	ALTERNATOR		MITSUBISHI	A5TN1791,A003T N1701	CA1317IR		21381	A21381MI
1790	12V	90A			IR/IF	ALTERNATOR		MITSUBISHI	A3TB0771	JA1615IR		21500	A21500MI
1791	12V	90A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	2S0T-10300-DB, 2S6T-10300-CG,	A5TA7792		22169	A22169MI
1792	12V	70A	CW	S6	IR/IF	ALTERNATOR		MITSUBISHI	2S6T-10300-CC, 2S6T-10300-CC	A5TA7692	443159	22172	A22172MI
1793	12V	50A			IR/EF	ALTERNATOR		MITSUBISHI	LD150421C	JA7611IR		22246	A22246MI
1794	12V	65A			IR	ALTERNATOR		MITSUBISHI	A2T14376	JA7931IR		22329	A22329MI
1795	12V	100A			IR/IF	ALTERNATOR		MITSUBISHI	A003TA4791	JA1519IR		22661	A22661MI
1796	12V	100A			IR	ALTERNATOR		MITSUBISHI	A003TA491, MD24241C	JA1522IR		22923	A22923MI

1797	12V	70A			IR	ALTERNATOR		mitsubishi	A1TA3392	CA1832IR		22927	A22927MI
1798	12V	100A	CW	V2	IR/IF	ALTERNATOR		mitsubishi	A3TA4399	JA1594IR		23075	A23075MI
1799	12V	110A			IR/IF	ALTERNATOR		mitsubishi	112457	CA1652IR	443036	23173	A23173MI
1800	12V	125A			IR	ALTERNATOR		mitsubishi	A003TA4290A, A002TB1000	JA1617IR		23306	A23306MI
1801	12V	90A			IR/IF	ALTERNATOR		mitsubishi	A003TB5099	CA1983IR		23308	A23308MI
1802	12V	75A			IR	ALTERNATOR		mitsubishi	A003T08183	JA1164IR, JA270ID		23717	A23717MI
1803	12V	90A			IR/IF	ALTERNATOR		mitsubishi	A003T07483	JA1184IR		23718	A23718MI
1804	12V	85A			IR	ALTERNATOR		mitsubishi	A003TG0091, A003TG0201F	JA1895IR		23849	A23849MI
1805	12V	130A			IR/IF	ALTERNATOR		mitsubishi	A002TC2681AF	CA2085IR		23917	A23917MI
1806	12V	150A	CW	SC7	IR/IF	ALTERNATOR		mitsubishi	A3TJ0781			23918	A23918MI
1807	12V	90A	CW	S8	ED/IF	ALTERNATOR		mitsubishi	A3TB6581			23945	A23945MI
1808	12V	80A	CW	S5	IR/IF	ALTERNATOR		mitsubishi	A5TG0291	CA2004IR	443154	23955	A23955MI
1809	12V	110A			IR/IF	ALTERNATOR		mitsubishi	A2TC0982	A2TC0982		24251	A24251MI
1810	12V	110A	CW	SC7	IR/IF	ALTERNATOR		mitsubishi	A5TL0581			14489 (无轮)	A14489MI
1811	24V	110A			IR/IF	ALTERNATOR		mitsubishi	A004TR5592	CA1883IR		203-060	
1812	24V	110A			IR/IF	ALTERNATOR		mitsubishi	A4TR5592	CA1883IR			
1813	12V	65A-75A			IR/IF	ALTERNATOR		mitsubishi	A003T0209Z, A000b0201	JA664IR			
1814	12V	90A	CW	S6	IR/IF	ALTERNATOR		mitsubishi	A5TA7792	CA1780IR			A22169MI
1815	12V	90A			IR/IF	ALTERNATOR		mitsubishi	A003T14491, A2A11010	JA1601IR			
1816	12V	90A			ED/IF	ALTERNATOR		mitsubishi	CA1972IR				
1817	12V	130A		S6	IR/IF	ALTERNATOR		mitsubishi	A3TJ1691				
1818	24V	35A			IR/IF	ALTERNATOR		mitsubishi	A3TN300Z, A002TN5002	23100-0T060			
1819	12V	75A	CW	S4	IR/IF	ALTERNATOR		mitsubishi	A5TB0891	CA1943IR	443121		A23927MI
1820	12V	51A			IR/EF	ALTERNATOR	INDUSTRIAL	MOTOROLA	RA12N55-JD6	RA12NJD604		7357	A7357MO
1821	12V	51A		V1	ER/EF	ALTERNATOR	INDUSTRIAL	MOTOROLA	A12NX600	12N51		7361	A7361MO
1822	12V	51A			IR/EF	ALTERNATOR	INDUSTRIAL	MOTOROLA	RA12N600D	RA12N600D		7365	A7365MO
1823	12V	72A	CW		IR/EF	ALTERNATOR	INDUSTRIAL	MOTOROLA	8MR2008P	10-266		7376	A7376MO
1824	24V	35A	BI		IR/EF	ALTERNATOR		MOTOROLA	10-285	8HC3022F		8050	A8050MO
1825	12V	37A	CW		IR/EF	ALTERNATOR		MOTOROLA	8AR2069F	8AR2073F		8056	A8056MO
1826	12V	130A	BI		IR/EF	ALTERNATOR	8LHA	MOTOROLA	8LHA2070	1-2429-00MO		8058	A8058MO
1827	12V	160A	BI		IR/EF	ALTERNATOR	8LHA	MOTOROLA	307-8329	8LHA2070VE		8329	A8329MO
1828	12V	160A	CW		IR/EF	ALTERNATOR	8LHA	MOTOROLA	8LHA2057VGH	8LHA2057V		8381	A8381MO
1829	12V	110A	CW		IR/EF	ALTERNATOR	8LHP	MOTOROLA	8LHP2172VAH			8409	A8409MO
1830	12V	130A	CW		IR/EF	ALTERNATOR	8LHP	MOTOROLA	8LHP2170	1-2532-00MO		8410	A8410MO
1831	12V	37A	CW		IR/EF	ALTERNATOR		MOTOROLA	307-8611	8AR2169F		8611	A8611MO
1832	12V	51A			IR/EF	ALTERNATOR		MOTOROLA	10-274	8AR2070K		8615	A8615MO
1833	12V	65A			IR/EF	ALTERNATOR		MOTOROLA	8MR2123L, 8MR2123LA			8625	A8625MO
1834	12V	185A	CW		IR/EF	ALTERNATOR		MOTOROLA	8SC2282VG			8636	A8636MO
1835	12V	160A	CW		IR/EF	ALTERNATOR	8LHA	MOTOROLA	8LHP2170E	8LHP2170VE		8732	A8732MO
1836	12V	37A			IR/EF	ALTERNATOR		MOTOROLA	RA12N453	RA12N453		7383=8611	A7383MO
1837	12V	130A	CW	S6	IR/IF	ALTERNATOR		POONG SUNG	02131-9271	1-3274-01PG		11190	A11190PS
1838	12V	130A	CW	S6	IR/IF	ALTERNATOR		POONG SUNG	02131-9153	1-3011-01PG		11191	A11191PS
1839	12V	110A	CW	SC6	IR/IF	ALTERNATOR	HAIRPIN	POONG SUNG	02131-9132	1-3271-01PG		11202	A11202PS
1840	12V	130A	CW	S6	IR/IF	ALTERNATOR		POONGSUNG	02131-9330	0-3C125, 37300-3C170		11193	A11193PS
1841	12V	70A			IR/EF	ALTERNATOR		PRESTOLITE	00021120W, 66021500M	CA1550IR		12526	A12526PL

1842	12V	70A			IR	ALTERNATOR	AS123	PRESTOLITE	60021070, 66021070S	CA1457IR		12750	A12750PL
1843	12V	90A	CW	S4	IR/IF	ALTERNATOR	TG	VALEO	TG9S018	1-2804-01VA		11011	A11011VA
1844	12V	120A	CW	S5	IR/IF	ALTERNATOR		VALEO	A0002655045	1-2560-01VA		11012	A11012VA
1845	12V	120A	CW	S6	IR/IF	ALTERNATOR		VALEO	A0002655438	1-2786-01VA		11013	A11013VA
1846	12V	120A	CW	S6	IR/IF	ALTERNATOR	TG	VALEO	TG12C014			11017	A11017VA
1847	12V	100A	CW	S6	IR/IF	ALTERNATOR		VALEO	SG10S039,	1-2602-01VA		11047	A11047VA
1848	12V	120A			IR/IF	ALTERNATOR		VALEO	2542582	271-154-09-02		11066	A11066VA
1849	12V	125A	CW	S6	IR/IF	ALTERNATOR	TG	VALEO	TG13S021	1-2774-01VA		11142	A11142VA
1850	12V	125A	CW	SC6	IR/IF	ALTERNATOR		VALEO	TG13S028	1-2775-01VA		11143	A11143VA
1851	12V	120A	CW	S5	IR/IF	ALTERNATOR		VALEO	TG13S026	1-2776-01VA		11144	A11144VA
1852	12V	145A	CW	S6	IR/IF	ALTERNATOR	TG	VALEO	TG15S039,	1-2564-01VA		11145	A11145VA
1853	12V	125A	CW	S6	IR/IF	ALTERNATOR	TG	VALEO	TG12S047,	1-2777-01VA		11148	A11148VA
1854	12V	150A	CW	SC6	IR/IF	ALTERNATOR	TG	VALEO	TG16C011			11160	A11160VA
1855	12V	110A	CW	SC6	IR/IF	ALTERNATOR	TG	VALEO	TG11C076	37300-2G100		11189	A11189VA
1856	12V	120A			IR	ALTERNATOR		VALEO	SG12B012	CA1541IR		11208	A11208VA
1857	12V	145A	CW	S5	IR/IF	ALTERNATOR	TG	VALEO	TG15C158			11264	A11264VA
1858	12V	180A	CW	SC7	IR/IF	ALTERNATOR		VALEO	TG17C030B			11306	A11306VA
1859	12V	180A	CW	S6	IR/IF	ALTERNATOR		VALEO	TG17C027			11355	A11355VA
1860	12V	180A	CW	S7	IR/IF	ALTERNATOR	TG	VALEO	TG17C036			11396	A11396VA
1861	12V	180A	CW	S5	IR/IF	ALTERNATOR	FG	VALEO	FG18S013	079-903-015F		11424	A11424VA
1862	12V	140A	CW	SC6	IR/IF	ALTERNATOR	TG	VALEO	TG14C034			11425	A11425VA
1863	12V	90A	CW	S4	IR/IF	ALTERNATOR		VALEO	2608371	37300-26100		11452	A11452VA
1864	12V	120A	CW	S5	IR/IF	ALTERNATOR	TG	VALEO	TG12C007, TG12C134			11459	A11459VA
1865	12V	90A			IR/IF	ALTERNATOR		VALEO	2655447	ca2020IR		11471	A11471VA
1866	12V	150A	CW	SD6	IR/IF	ALTERNATOR		VALEO	FG15S026			11485	A11485VA
1867	12V	110A	CW	SC6	IR/IF	ALTERNATOR		VALEO	37300-2G400			11492	A11492VA
1868	12V	90A			IR/IF	ALTERNATOR		VALEO	2610428	FG10T011		11610	A11610VA
1869	12V	120A	CW	S6	IR/IF	ALTERNATOR	TG	VALEO	TG12C098			11619	A11619VA
1870	12V	140A	CW	SC6	IR/IF	ALTERNATOR	TG	VALEO	TG14C019			11810	A11810VA
1871	24V	55A			IR/EF	ALTERNATOR		VALEO	A14N112M	CA858IR		12110	A12110PR
1872	24V	55A			IR/EF	ALTERNATOR		VALEO	A14N206M	CA857IR		12417	A12417VA
1873	24V	40A	CW		IR/EF	ALTERNATOR		VALEO	A13N270	443121(CA19431 D)		12419	A12419VA
1874	12V	70A			IR/IF	ALTERNATOR		VALEO	2341725D, A11V145,	CA1038IR		12422	A12422VA
1875	24V	75A	BI		IR/EF	ALTERNATOR		VALEO	A14N104F, A14N160J			12709	A12709VA
1876	12V	60A			IR/EF	ALTERNATOR		VALEO	518040	CA1192IR		13068	A13068VA
1877	12V	50A			IR	ALTERNATOR		VALEO	436496	CA1048IR		13205	A13205VA
1878	12V	90A	CW	S6	IR/IF	ALTERNATOR		VALEO	A13VI24	1-2168-01VA		13464	A13464VA
1879	12V	120A			IR/IF	ALTERNATOR		VALEO	0124515058	CA1588IR		13932	A13932VA
1880	12V	105A	CW	S5	IR/IF	ALTERNATOR		VALEO	TG10S015			13944	A13944VA
1881	12V	145A	CW	S6	IR/IF	ALTERNATOR		VALEO	TG15C014	TG15S011		13968	A13968VA
1882	12V	140A			IR	ALTERNATOR		VALEO	TG14C012	CA1985IR		20146	A20146VA
1883	12V	110A	CW	S6	IR/IF	ALTERNATOR		VALEO	7700104210	A13VI216		20245	A20245VA
1884	12V	80A				ALTERNATOR		VALEO	90052100,205380 6	CA2023IR		20340	A20340VA
1885	12V	110A			IR	ALTERNATOR		VALEO	7711368385	CA2043IR		20343	A20343VA
1886	12V	110A	CW		IR	ALTERNATOR		VALEO	TG11C041, TG11C066	CA1975IR		20453	A20453VA

1887	12V	120A			IR/IF	ALTERNATOR		VALEO	A13VI289	CA1572IR		20510	A20510VA
1888	12V	75A			IR/IF	ALTERNATOR		VALEO		37300-42711		20578	A20578VA
1889	12V	70A			IR/IF	ALTERNATOR		VALEO	436490	CA1095IR		21185	A21185VA
1890	12V	75A			IR/IF	ALTERNATOR		VALEO	436465	CA896IR		21203	A21203VA
1891	12V	120A			IR	ALTERNATOR		VALEO	A14VI13,436478	CA1098IR		21281	A21281VA
1892	12V	80A			IR/IF	ALTERNATOR		VALEO	2341070, A12VI72	CA1039IR		21297	A21297VA
1893	12V	110A	CW	S6	IR/IF	ALTERNATOR		VALEO	A13VI73	CA1157IR		21298	A21298VA
1894	12V	150A			IR	ALTERNATOR		VALEO	7799180	CA1904IR		21338	A21338VA
1895	12V	75A			IR	ALTERNATOR		VALEO	6200007003,SG7 SG10,SG35212	CA1484IR		21397	A21397VA
1896	12V	75A			IR/IF	ALTERNATOR		VALEO	026 A11V482	CA1304IR		21400	A21400VA
1897	12V	110A			IR/IF	ALTERNATOR		VALEO	A13VI195	CA1444IR		21401	A21401VA
1898	12V	75A			IR/IF	ALTERNATOR		VALEO	A11VI81	CA1343IR		21419	A21419VA
1899	12V	70A			IR	ALTERNATOR		VALEO	A11VI91	CA1442IR		21435	A21435VA
1900	12V	80A			IR	ALTERNATOR		VALEO	A13VI203	CA1496IR		21437	A21437VA
1901	12V	90A	CW		IR	ALTERNATOR		VALEO	A13VI204	CA1564IR		21439	A21439VA
1902	12V	90A			IR/IF	ALTERNATOR		VALEO	SG9B037	CA1342IR		21466	A21466VA
1903	12V	100A			IR/IF	ALTERNATOR		VALEO	A13VI234	CA1631IR		21469	A21469VA
1904	12V	100A	CW	S5	IR/IF	ALTERNATOR	SG	VALEO	SG12B080	CA1631IR		21470	A21470VA
1905	12V	70A	CW	S6	IR/IF	ALTERNATOR	SG	VALEO	SG8B011	CA1682IR		21485	A21485VA
1906	12V	90A	CW	S6	IR	ALTERNATOR		VALEO	A13VI242	CA1589IR		21493	A21493VA
1907	12V	70A			IR/IF	ALTERNATOR		VALEO	A11VI110	CA1637IR		21620	A21620VA
1908	12V	70A			IR	ALTERNATOR		VALEO	SG7S012	CA1637IR		21621	A21621VA
1909	12V	70A			IR	ALTERNATOR		VALEO	A11VI109	CA1687IR		21660	A21660VA
1910	12V	70A	CW	S6	IR/IF	ALTERNATOR	SG	VALEO	SG7S016			21664	A21664VA
1911	12V	150A	CW	S6	IR/IF	ALTERNATOR		VALEO	A14VI27, A14VI271	CA1509IR		21784	A21784VA
1912	12V	150A			IR/IF	ALTERNATOR		VALEO	A14VI35	CA1553IR		21787	A21787VA
1913	12V	80A			IR/IF	ALTERNATOR		VALEO	A13VI40, A12VI82	CA715IR		21803	A21803VA
1914	12V	80A			IR/IF	ALTERNATOR		VALEO	A13VI84	CA1203IR		21908	A21908VA
1915	12V	95A			IR/IF	ALTERNATOR		VALEO	436613	CA1065IR		21922	A21922VA
1916	12V	75A			IR	ALTERNATOR		VALEO	A14N150	CA229IR		22201	A22201PR
1917	12V	55A	CW	S4	IR/EF	ALTERNATOR		VALEO	2541171	CA380IR		22262	A22262VA
1918	12V	100A			IR/IF	ALTERNATOR		VALEO	A13VI13	CA535IR		22337	A22337VA
1919	12V	70A			IR/IF	ALTERNATOR		VALEO	A13VI191	CA1442IR		22447	A22447VA
1920	12V	90A			IR/IF	ALTERNATOR		VALEO	A13VI155	CA837IR		22450	A22450VA
1921	12V	70A			IR/IF	ALTERNATOR		VALEO	A13VI25	CA637IR		22744	A22744VA
1922	12V	75A			IR/IF	ALTERNATOR		VALEO	2341792, 2541002	A11VI79		22746	A22746VA
1923	12V	80A			IR/IF	ALTERNATOR		VALEO	5705F4	CA638IR		22782	A22782VA
1924	12V	80A			IR/IF	ALTERNATOR		VALEO	2541475	CA730IR		22784	A22784VA
1925	12V	105A			IR/IF	ALTERNATOR		VALEO	TG9S011	CA1934IR		22795	A22795VA
1926	12V	90A			IR/IF	ALTERNATOR		VALEO	SG9B038	CA1390IR		22851	A22851VA
1927	12V	80A	CW	S6	IR/IF	ALTERNATOR		VALEO	A13VI236	CA1499IR		22929	A22929VA
1928	12V	120A			IR	ALTERNATOR		VALEO	12 31 2 247 389	CA1559IR		22955	A22955VA
1929	12V	150A			IR/IF	ALTERNATOR		VALEO	113407, 12312340866	CA1756IR		22969	A22969VA
1930	12V	150A	CW	S5	IR/IF	ALTERNATOR	TG	VALEO	TG15C038			22970	A22970VA
1931	12V	125A			IR/IF	ALTERNATOR		VALEO	SG12B017, SG12B071	CA1627IR		22990	A22990VA

1932	12V	150A			IR/IF	ALTERNATOR		VALEO	SG15S030	CA1584IR		23076	A23076VA
1933	12V	80A			IR/IF	ALTERNATOR		VALEO	2542326	CA1653IR		23110	A23110VA
1934	12V	120A			IR/IF	ALTERNATOR		VALEO	437361	CA1662IR		23148	A23148VA
1935	12V	80A			IR/IF	ALTERNATOR		VALEO	2542923	CA1665IR		23166	A23166VA
1936	12V	110A	CW	SC5	IR/IF	ALTERNATOR		VALEO	TG11C011, TG11C062	CA1762IR		23174	A23174VA
1937	12V	90A			IR	ALTERNATOR		VALEO	2542441	CA1643IR		23222	A23222VA
1938	12V	120A	CW	S6	IR/IF	ALTERNATOR		VALEO	SG12B040	CA1643IR		23223	A23223VA
1939	12V	90A			IR/IF	ALTERNATOR		VALEO	0-124-325-072	CA1654IR		23249	A23249VA
1940	12V	180A			IR/IF	ALTERNATOR		VALEO	TG17C041	CA2038IR		23290	A23290VA
1941	12V	170A			IR/IF	ALTERNATOR		VALEO	2542611	CA1905IR		23319	A23319VA
1942	12V	150A			IR/IF	ALTERNATOR		VALEO	SG15S019	CA1778IR		23332	A23332VA
1943	12V	110A			IR	ALTERNATOR		VALEO	TG11C039, TG11C055	CA2003IR		23359	A23359VA
1944	24V	90A			IR/IF	ALTERNATOR		VALEO	A14VI20	CA1310IR		23486	A23486VA
1945	12V	70A			IR	ALTERNATOR		VALEO	2542671	CA1856IR		23797	A23797VA
1946	12V	90A			IR	ALTERNATOR		VALEO	A13VI256	CA1641IR		23813	A23813VA
1947	12V	90A			IR	ALTERNATOR		VALEO	2542307	CA1642IR		23814	A23814VA
1948	12V	125A			IR	ALTERNATOR		VALEO	2542554	CA1814IR		23837	A23837VA
1949	12V	150A			IR	ALTERNATOR		VALEO	TG15C012	CA1757IR		23890	A23890VA
1950	12V	110A			IR/IF	ALTERNATOR		VALEO	TG11C034	CA1762IR		23893	A23893VA
1951	12V	70A			IR/IF	ALTERNATOR		VALEO	37300-02550	JA1798IR-1		23910	A23910VA
1952	12V	70A			IR/IF	ALTERNATOR		VALEO	102211-8010, 102211-8612	CA1855IR		23922	A23922VA
1953	12V	90A			IR/IF	ALTERNATOR		VALEO	439505	CA1862IR		23923	A23923VA
1954	12V	95A	CW	S6	IR/IF	ALTERNATOR		VALEO	SG9B053			23930	A23930VA
1955	12V	110A			IR/IF	ALTERNATOR		VALEO	TG11C048	CA1921IR		23950	A23950VA
1956	12V	125A			IR/IF	ALTERNATOR		VALEO	SG12B089	ca1933IR		23975	A23975VA
1957	12V	120A			IR/IF	ALTERNATOR		VALEO	7G9N10300CC	CA2044IR		24011	A24011VA
1958	12V	97A	CW	SC6	IR	ALTERNATOR		VALEO	TG10B013, TG10B024	CA1879IR		24079	A24079VA
1959	12V	90A	CW		IR/IF	ALTERNATOR		VALEO	TG9B026			24080	A24080VA
1960	12V	150A	CW	SC6	IR/IF	ALTERNATOR	FG	VALEO	FG15T036			11822A	A11822AVA
1961	12V	120A	CW	SC5	IR/IF	ALTERNATOR	SG	VALEO	SG12B050	CA1645IR		23160-5G	A23160VA
1962	12V	110A			IR/IF	ALTERNATOR		VALEO	2541914	CA1307IR			
1963	12V	110A			IR	ALTERNATOR		VALEO	TG11C064	CA1948IR			
1964	12V	120A			IR/IF	ALTERNATOR		VALEO	Z349273, SG12B030	CA1982IR			CA1982IR
1965	12V	125A			IR/IF	ALTERNATOR		VALEO	23100-00QAP	CA1881IR			CA1881IR
1966	12V	60A			IR/EF	ALTERNATOR		VALEO	A13N157	CA549IR			CA549IR
1967	12V	65A			IR/EF	ALTERNATOR		VALEO	432981, 433475	CA1382IR			
1968	12V	70A			IR	ALTERNATOR		VALEO	A11VI106	CA1498IR			
1969	12V	70A			IR/IF	ALTERNATOR		VALEO	A13VI142	CA1583IR			CA1583IR
1970	12V	80A				ALTERNATOR		VALEO	A13VI217	CA1331IR			
1971	12V	80A			IR/IF	ALTERNATOR		VALEO	TG0C010, TG0C010	CA1963IR			CA1963IR
1972	12V	95A			IR	ALTERNATOR		VALEO	CA1829IR				
1973	12V	95A			IR	ALTERNATOR		VALEO	Z343333, SG0B025	CA1976IR			
1974	12V	95A			IR/IF	ALTERNATOR		VALEO	TG9B047	CA2098IR			
1975	12V	80A	CW	S6	IR/IF	ALTERNATOR		VISTEON	1140135	CA1777IR	443104		A8531FD
										LR1100-730		11010	A11010HI